



PLASMA TV OWNER'S MANUAL

32PC5DVC

Please read this manual carefully before operating your set.
Retain it for future reference.
Record model number and serial number of the set.
See the label attached on the back cover and quote this information to your dealer when you require service.

ENERGY STAR is a set of power-saving guidelines issued by the U.S. Environmental Protection Agency(EPA).



As an ENERGY STAR Partner LGE U. S. A.,Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

WARNING / CAUTION



WARNING / CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK). NO
USER SERVICEABLE PARTS INSIDE. REFER TO
QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING/CAUTION

TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

NOTE TO CABLE/TV INSTALLER

This reminder is provided to call the CATV system installer’s attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

WARNING / CAUTION

To prevent fire or shock hazards, do not expose this product to rain or moisture.

FCC NOTICE

Class B digital device

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

CAUTION

Do not attempt to modify this product in any way without written authorization from LG Electronics. Unauthorized modification could void the user’s authority to operate this product

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

Important safety instructions shall be provided with each apparatus. This information shall be given in a separate booklet or sheet, or be located before any operating instructions in an instruction for installation for use and supplied with the apparatus.

This information shall be given in a language acceptable to the country where the apparatus is intended to be used. The important safety instructions shall be entitled "Important Safety Instructions". The following safety instructions shall be included where applicable, and, when used, shall be verbatim as follows. Additional safety information may be included by adding statements after the end of the following safety instruction list. At the manufacturer's option, a picture or drawing that illustrates the intent of a specific safety instruction may be placed immediately adjacent to that safety instruction:

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.



- 1 Do not use this apparatus near water.



- 2 Clean only with dry cloth.



- 3 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions




- 4 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.




- 5 When mounting a TV it on the wall, make sure not to install TV by hanging power and signal cables on the back of the TV.

- 6 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

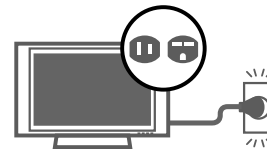


- 7 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

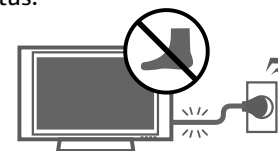

- 8 Only use attachments/accessories specified by the manufacturer.



- 9 Unplug this apparatus when unused for long periods of time.

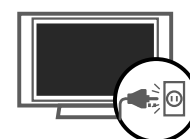


- 10 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.




S3125A

- 11 Never touch this apparatus or antenna during a thunder or lightning storm.
- 12 Do not allow a impact shock or any objects to fall into the product, and do not drop onto the screen with something.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has exposed to rain or moisture, does not operate normally, or has been dropped.

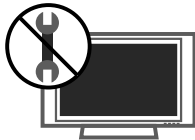

- 14 **CAUTION concerning the Power Cord :**
Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.
Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use

of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

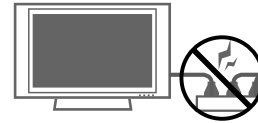


- 15 **Outdoor use marking :**
WARNING - To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



- 16 **Wet Location Marking :** Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on or over apparatus.



- 17 **GROUNDING**
Ensure that you connect the earth ground wire to prevent possible electric shock. If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightening rods, or gas pipes.

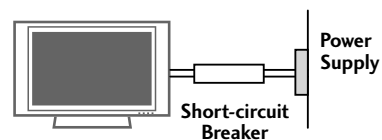

- 18 **DISCONNECTING DEVICE FROM MAINS**
Mains plug is the disconnecting device. The plug must remain readily operable.

CONTENTS

| | |
|----------------------------------|---|
| WARNING / CAUTION | 1 |
| SAFETY INSTRUCTIONS | 2 |
| INTRODUCTION | |
| Feature of this TV | 6 |

PREPARATION

| | |
|---------------------------------------|----|
| Accessories | 7 |
| Front Panel Information | 8 |
| Back Panel Information | 9 |
| Stand Installation | 10 |
| Back Cover for Wire Arrangement | 10 |
| Attaching the TV to a Wall | 11 |
| Use Power Cord Holder | 11 |
| Desktop Pedestal Installation | 12 |
| Production Cover | 12 |
| Antenna or Cable Connection | 13 |

EXTERNAL EQUIPMENT SETUP

| | |
|-------------------------|----|
| HD Receiver Setup | 14 |
| DVD Setup | 17 |
| VCR Setup | 19 |
| Headphone Setup | 20 |
| PC Setup | 21 |

WATCHING TV / CHANNEL CONTROL

| | |
|----------------------------------------------|----|
| Remote Control Functions | 24 |
| Turning On TV | 26 |
| Channel Selection | 26 |
| Volume Adjustment | 26 |
| On-Screen Menus Selection | 27 |
| Channel Search | |
| - Auto Scan (Auto Tuning) | 28 |
| - Add / Delete Channel (Manual Tuning) | 29 |
| - Channel Editing | 30 |
| Key Lock | 31 |

PICTURE CONTROL

| | |
|------------------------------------------------|----|
| Picture Size (Aspect Ratio) Control | 32 |
| Preset Picture Settings | |
| - Picture Mode - Preset | 34 |
| - Color Tone - Preset | 35 |
| Manual Picture Adjustment | |
| - Picture Mode - User Mode | 36 |
| - Color Tone - User Mode | 37 |
| XD (Picture Improvement Technology) | 38 |
| Advanced - Black (Darkness) Level | 39 |
| Image Sticking Minimization (ISM) Method | 40 |
| Low-Power Picture Mode | 41 |
| Picture Reset | 42 |

SOUND & LANGUAGE CONTROL

| | |
|----------------------------------------------|----|
| Preset Sound Setting (Sound Mode) | 43 |
| Sound Setting Adjustment - User Mode | 44 |
| Balance | 45 |
| Stereo/SAP Broadcasts Setup | 46 |
| Audio Language | 47 |
| On-Screen Menus Language Selection | 48 |
| Caption Mode | 49 |
| - Analog Broadcasting System Captions | 50 |
| - Digital Broadcasting System Captions | 51 |
| - Caption Option | 52 |

TIME SETTING

| | |
|--------------------------------|----|
| Clock Setting | |
| - Auto Clock Setup | 53 |
| - Manual Clock Setup | 54 |
| Auto On/Off Time Setting | 55 |
| Sleep Time Setting | 56 |
| Auto Shut-off Setting..... | 57 |

PARENTAL CONTROL / RATINGS

| | |
|----------------------------------|----|
| Set Password & Lock System | 58 |
| Movie & TV Rating | 60 |
| Downloadable Rating | 62 |

APPENDIX

| | |
|----------------------------------------|----|
| Troubleshooting | 63 |
| Maintenance | 65 |
| Product Specifications | 66 |
| External Control Through RS-232C | 67 |

INTRODUCTION

FEATURE OF THIS TV



LG's own special digital image generator, consisting of a full digital image processor, six different main picture quality factors.




HDMI™, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing."

PREPARATION

ACCESSORIES

Ensure that the following accessories are included with your product. If an accessory is missing, please contact the dealer where you purchased the product.


User must use shielded signal interface cables (D-sub 15 pin cable) with ferrite cores to maintain standard compliance for the product.

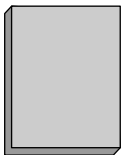

Owner's Manual




CD Manual

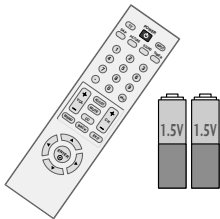


Remote Control,
Batteries



 Power Cord

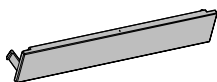

Protection Cover
(Refer to p.11)

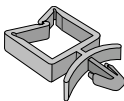 

Power Cord Holder
(Refer to p.11)

 


4-Bolts for stand assembly
(Refer to p.10)




75ohm Round Cable

Option Extras

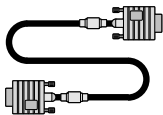

D-sub 15 pin Cable

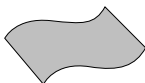 




Polishing Cloth

- * Slightly wipe stained spot on the exterior only with the polishing cloth for the product exterior if there is stain or fingerprint on surface of the exterior.
- * Do not wipe roughly when removing stain. Please be cautious of that excessive pressure may cause scratch or discoloration.

PREPARATION


FRONT PANEL INFORMATION

- Here shown may be somewhat different from your TV.
- **NOTE:** If your product has a protection tape attached, remove the tape.
And then wipe the product with a cloth (If a polishing cloth is included with your product, use it).

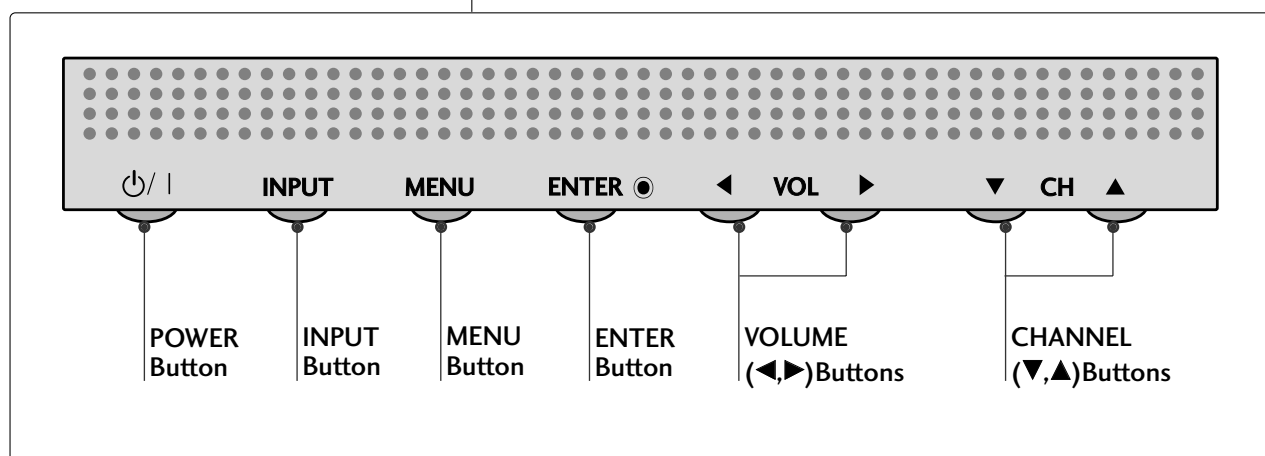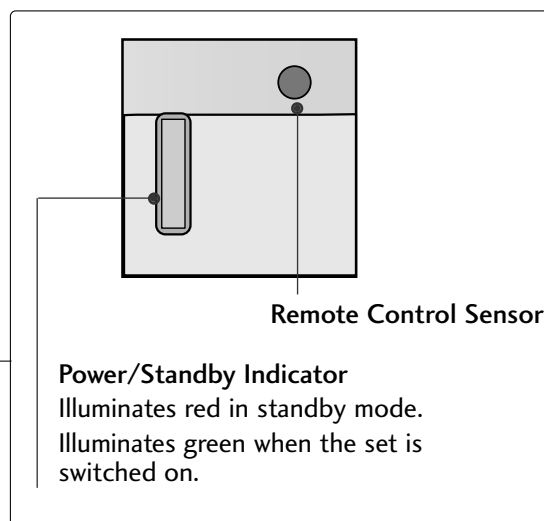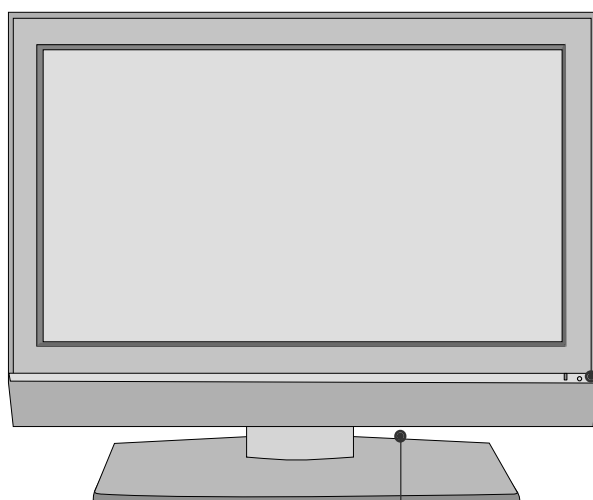

BACK PANEL INFORMATION

■ Here shown may be somewhat different from your TV.

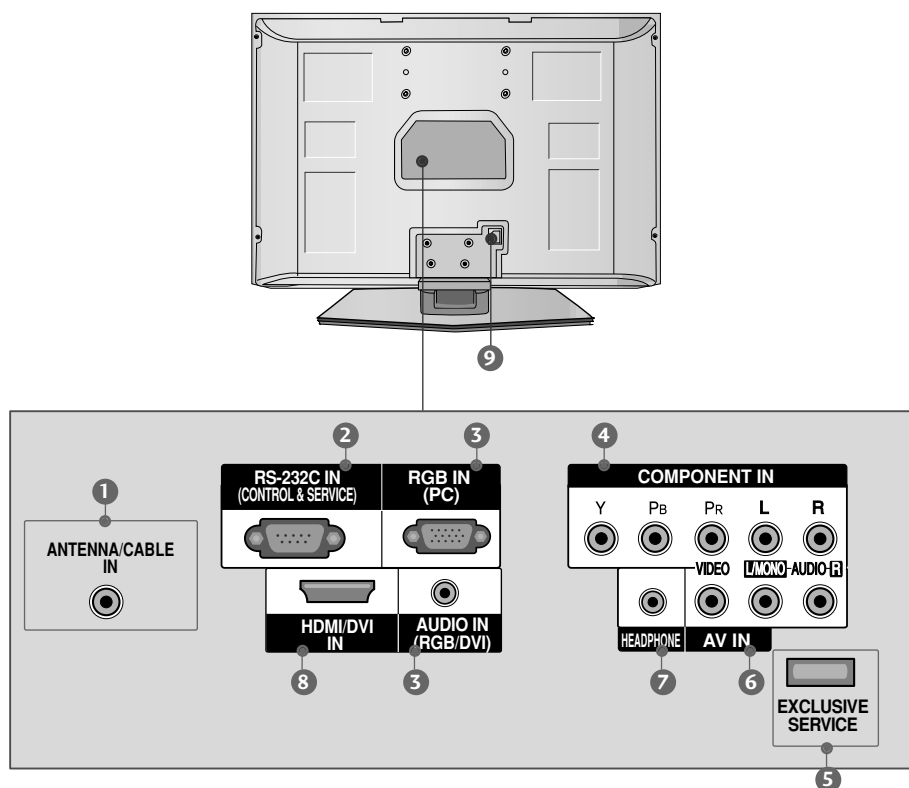

1 ANTENNA/CABLE IN

Connect over-the air signals to this jack.
Connect cable signals to this jack.

2 RS-232C IN (CONTROL & SERVICE) PORT

Connect to the RS-232C port on a PC.

3 RGB IN (PC)

Connect the output from a PC.

AUDIO IN (RGB/DVI)

Connect the audio from a PC.

4 COMPONENT IN

Connect a component video/audio device to these jacks.

5 EXCLUSIVE SERVICE

6 AV IN (Audio/Video)

Connect audio/video output from an external device to these jacks.

7 HEADPHONE INPUT

Plug the headphone into the headphone socket.

8 HDMI/DVI IN

Connect a HDMI signal to this jack.

Or DVI (Video) signal to this jack with a HDMI to DVI cable.

9 Power Cord Socket

For operation with AC power.


Caution: Never attempt to operate the TV on DC power.

PREPARATION


STAND INSTALLATION

■ Here shown may be somewhat different from your TV.


- 1 Carefully place the product screen side down on a cushioned surface that will protect product and screen from damage.

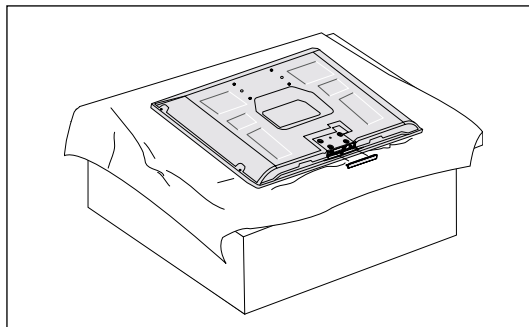

- 2 Assemble the product stand with the product as shown.

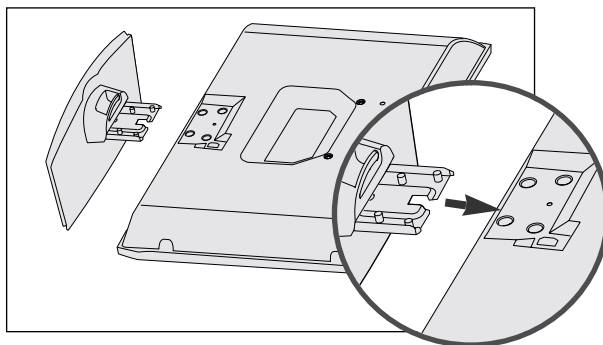


- 3 Install the 4 bolts securely, in the back of the product in the holes provided.

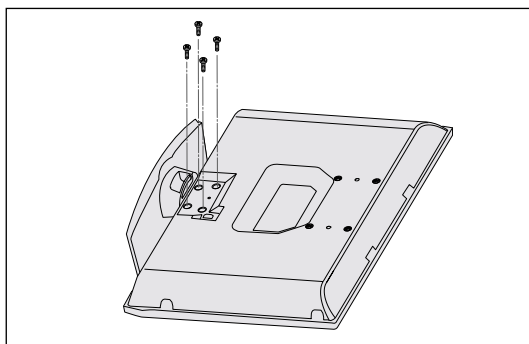

BACK COVER FOR WIRE ARRANGEMENT

Arrange the cables as shown picture.

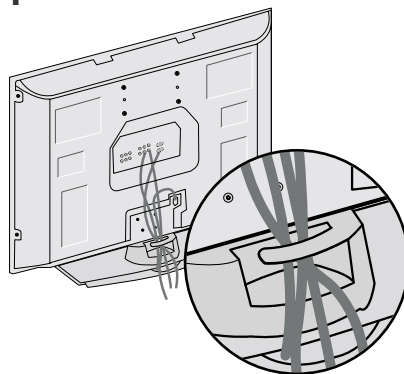


ATTACHING THE TV TO A WALL


- You should purchase necessary components to prevent TV from falling off of the stand.
- Here shown may be somewhat different from your TV.

We recommend that you set up the TV close to a wall so it cannot fall over if pushed backwards. Additionally, we recommend that the TV be attached to a wall so it cannot be pulled in a forward direction, potentially causing injury or damaging the product.

Caution: Please make sure that children don't climb on or hang from the TV.

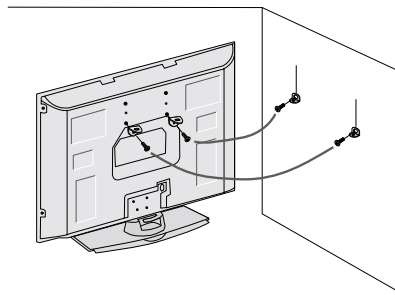

- Insert the eye-bolts or TV brackets and bolts to tighten the product to the wall as shown in the picture.
 - * If your product has the bolts in the eye-bolts position before inserting the bolts, loosen the bolts.
- Secure the wall brackets with the bolts (not provided as parts of the product, must purchase separately) to the wall. Match the height of the bracket that is mounted on the wall to the holes in the product.
- Ensure the eye-bolts or brackets are tightened securely.

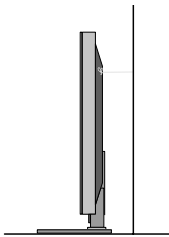


- Use a sturdy rope (not provided as parts of the product, must purchase separately) to tie the product. It is safer to tie the rope so it becomes horizontal between the wall and the product.

USE POWER CORD HOLDER

- Here shown may be somewhat different from your TV.


After connecting the power cord to the AC input terminal, remove the bolt at the hole on the back cover and fix the power cord at the rear side of the TV by using the bracket for fixing the power cord.

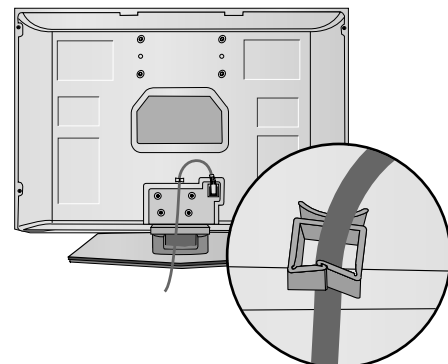

PREPARATION

DESKTOP PEDESTAL INSTALLATION


For proper ventilation, allow a clearance of 4 inches on all four sides from the wall.

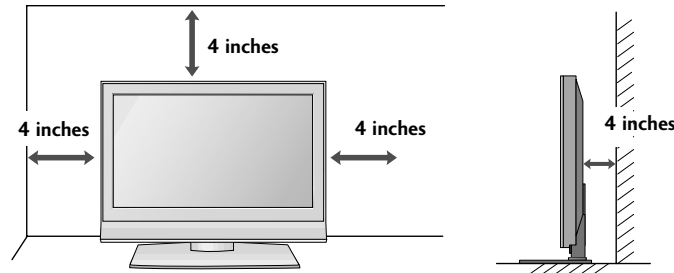

CAUTION ► Ensure adequate ventilation by following the clearance recommendations.

PROTECTION COVER

When installing the wall-mounted unit, use the protection cover for desk-type stand installation.

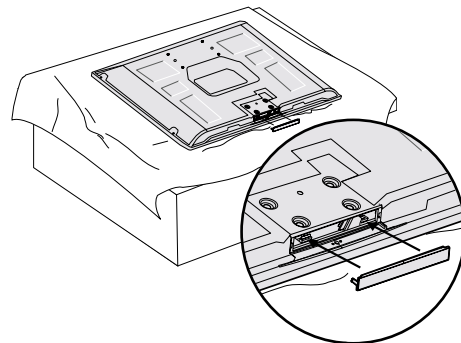


ANTENNA OR CABLE CONNECTION


1. Antenna (Analog or Digital)

Wall Antenna Socket or Outdoor Antenna without a Cable Box Connections.

For optimum picture quality, adjust antenna direction if needed.

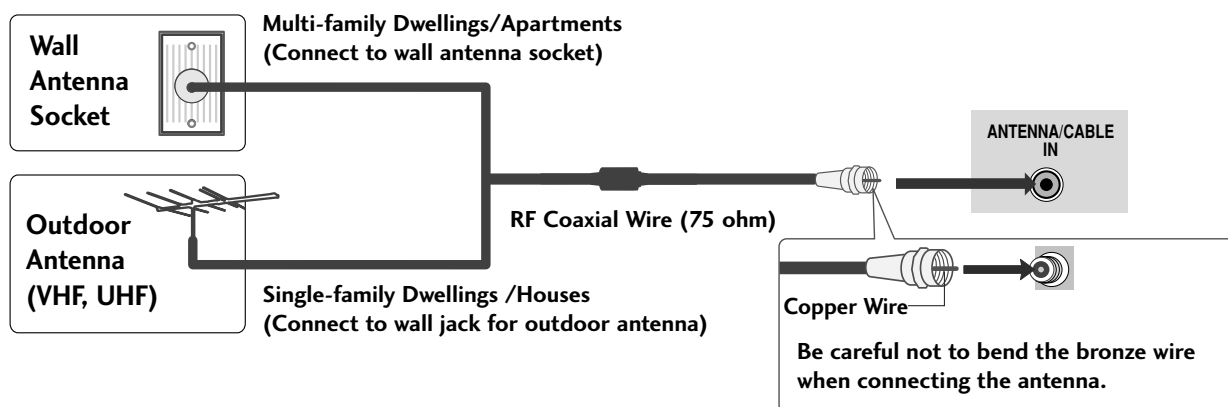

2. Cable

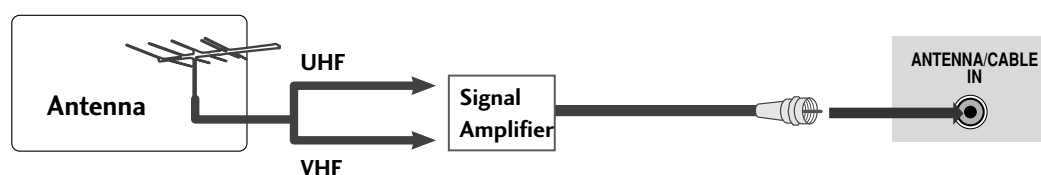

- To improve the picture quality in a poor signal area, please purchase a signal amplifier and install properly.
- If the antenna needs to be split for two TV's, install a 2-Way Signal Splitter.
- If the antenna is not installed properly, contact your dealer for assistance.

NOTE ▶ The TV will let you know when the analog, cable, and digital channel scans are complete.

EXTERNAL EQUIPMENT SETUP

- To prevent the equipment damage, never plug in any power cords until you have finished connecting all equipment.


HD RECEIVER SETUP

This TV can receive Digital Over-the-air/Cable signals without an external digital set-top box. However, if you do receive digital signals from a digital set-top box or other digital external device, refer to the figure as shown below.

When connecting Component cable

1. How to connect

- 1 Connect the video outputs (Y, PB, PR) of the digital set top box to the **COMPONENT IN (Y, PB, PR)** jacks on the set. Match the jack colors (Y = green, PB = blue, and PR = red).
- 2 Connect the audio output of the digital set-top box to the **COMPONENT IN (L, R)** jacks on the set.

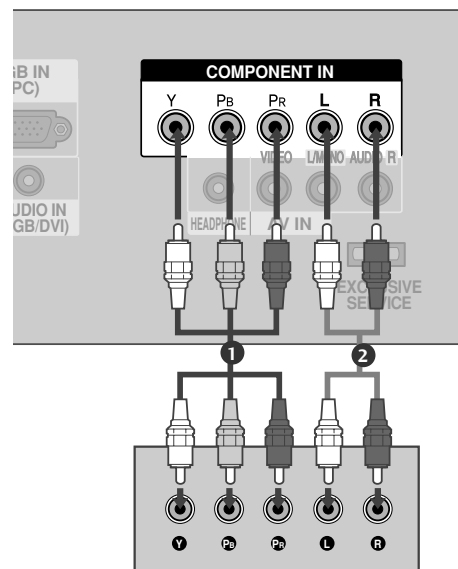

2. How to use

- Turn on the digital set-top box.
(Refer to the owner's manual for the digital set-top box. operation)
- Select **Component** input source by using the **INPUT** button on the remote control.

| Signal | Component | HDMI |
|--------|-----------|------|
| 480i | Yes | No |
| 480p | Yes | Yes |
| 720p | Yes | Yes |
| 1080i | Yes | Yes |

Y, CB/PB, CR/PR

| Resolution | Horizontal Frequency(KHz) | Vertical Frequency(Hz) |
|------------|---------------------------|------------------------|
| 720x480i | 15.73 | 59.94 |
| | 15.73 | 60.00 |
| 720x480p | 31.47 | 59.94 |
| | 31.50 | 60.00 |
| 1280x720p | 44.96 | 59.94 |
| | 45.00 | 60.00 |
| 1920x1080i | 33.72 | 59.94 |
| | 33.75 | 60.00 |


When connecting HDMI cable

1. How to connect

- 1 Connect the digital set-top box to **HDMI/DVI IN** jack on the set.
- 2 No separated audio connection is necessary.
HDMI supports both audio and video.

2. How to use

- Turn on the digital set-top box.
(Refer to the owner's manual for the digital set-top box.)
- Select **HDMI** input source by using the **INPUT** button on the remote control.

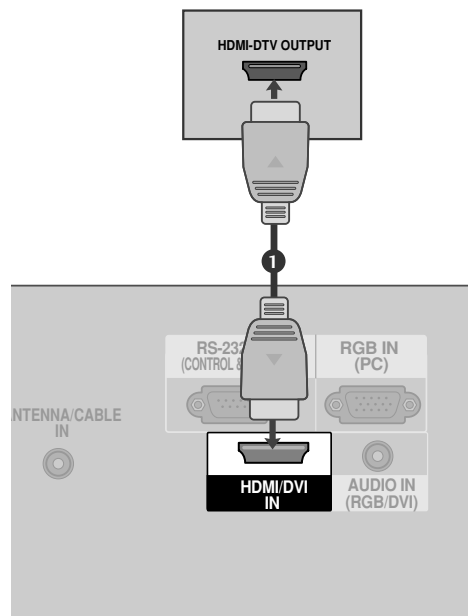


HDMI/DVI-DTV mode

| Resolution | Horizontal Frequency(KHz) | Vertical Frequency(Hz) |
|------------|---------------------------|------------------------|
| 720x480p | 31.47 | 59.94 |
| | 31.47 | 60.00 |
| 1280x720p | 44.96 | 59.94 |
| | 45.00 | 60.00 |
| 1920x1080i | 33.72 | 59.94 |
| | 33.75 | 60.00 |

EXTERNAL EQUIPMENT SETUP

When connecting HDMI to DVI cable

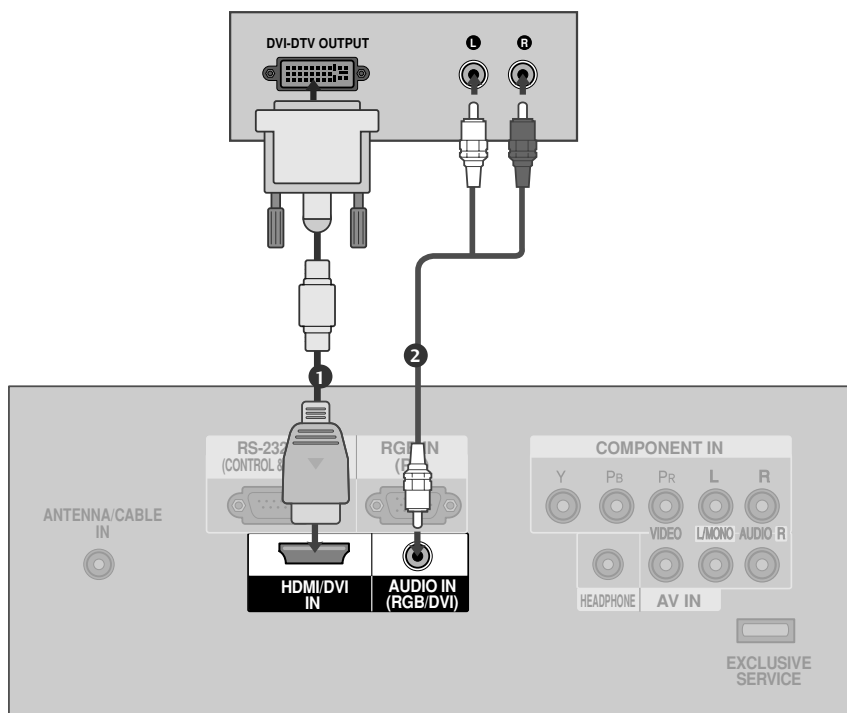

1. How to connect

- 1 Connect the DVI output of the digital set-top box to the **HDMI/DVI IN** jack on the set.
- 2 Connect the audio output of the digital set-top box to the **AUDIO IN (RGB/DVI)** jack on the set.

2. How to use


- Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
- Select **HDMI** input source by using the **INPUT** button on the remote control.

DVD SETUP

When connecting Component cable

1. How to connect

- 1 Connect the video outputs (Y, P_B, P_R) of the DVD to the **COMPONENT IN (Y, P_B, P_R)** jacks on the set.
Match the jack colors
(Y = green, P_B = blue, and P_R = red).
- 2 Connect the audio outputs of the DVD to the **COMPONENT IN (L, R)** jacks on the set.

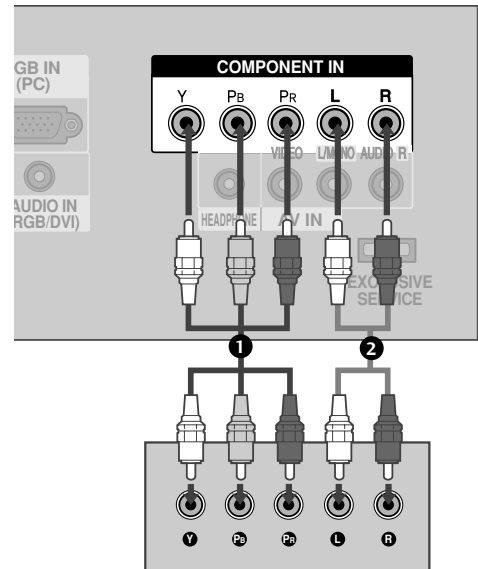

2. How to use

- Turn on the DVD player, insert a DVD.
- Select **Component** input source by using the **INPUT** button on the remote control.
- Refer to the DVD player's manual for operating instructions.

Component Input ports

To get better picture quality, connect a DVD player to the component input ports as shown below.

| Component ports on the TV | Y | P _B | P _R |
|-------------------------------------|---|----------------|----------------|
| Video output ports on DVD player | Y | P _B | P _R |
| | Y | B-Y | R-Y |
| | Y | Cb | Cr |
| | Y | Pb | Pr |

EXTERNAL EQUIPMENT SETUP


When connecting HDMI cable

1. How to connect

- 1 Connect the HDMI output of the DVD to the **HDMI/DVI IN** jack on the set.
- 2 No separated audio connection is necessary. HDMI supports both audio and video.

2. How to use


- Select **HDMI** input source by using the **INPUT** button on the remote control.
- Refer to the DVD player's manual for operating instructions.

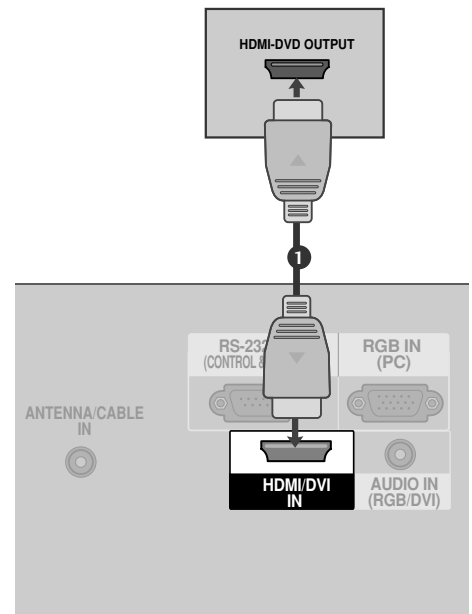

VCR SETUP

- To avoid picture noise (interference), leave an adequate distance between the VCR and TV.
- If the 4:3 picture format is used; the fixed images on the sides of the screen may remain visible on the screen. This phenomenon is common to all manufactures and in consequence the manufactures warranty does not cover the product bearing this phenomenon.

When connecting with an antenna

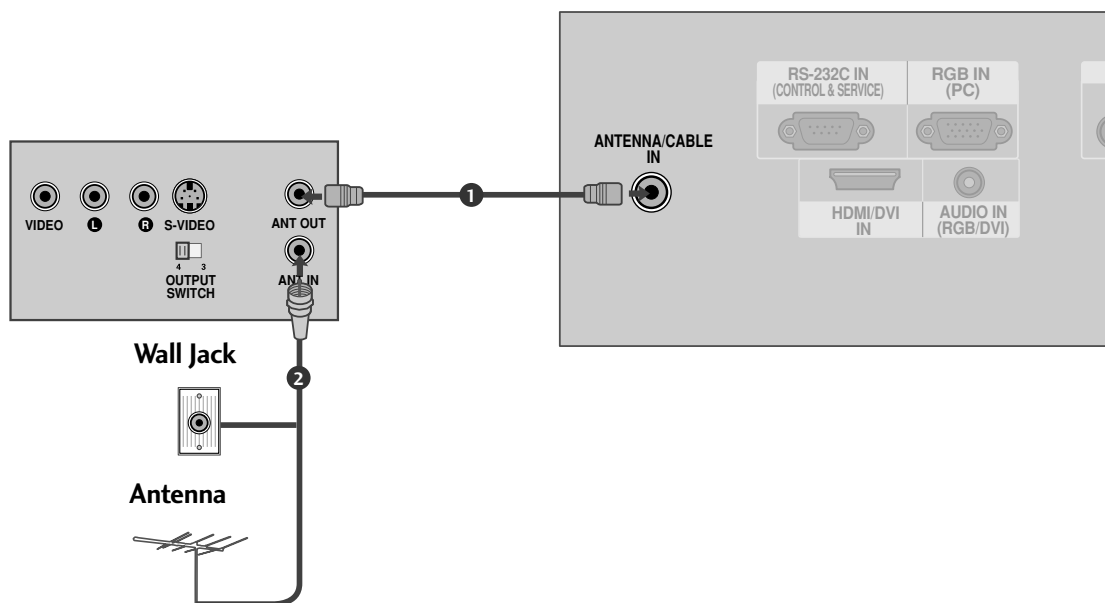

1. How to connect

- 1 Connect the RF antenna out socket of the VCR to the **ANTENNA/CABLE IN** socket on the set.
- 2 Connect the antenna cable to the RF antenna in socket of the VCR.

2. How to use

- Set VCR output switch to 3 or 4 and then tune TV to the same channel number.
- Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)

EXTERNAL EQUIPMENT SETUP

When connecting with a RCA cable

1. How to connect


- 1 Connect the **AUDIO/VIDEO** jacks between TV and VCR. Match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red)

2. How to use

- Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- Select **AV** input source by using the **INPUT** button on the remote control.

! NOTE

- ▶ If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** jack of the set.

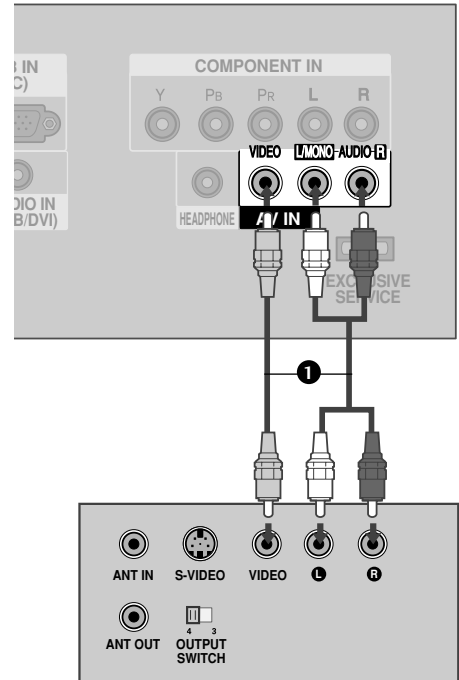


HEADPHONE SETUP

You can listen to the sound through the headphone.

1. How to connect

- 1 Plug the headphone into the headphone socket.
- 2 To adjust the headphone volume, press the **VOL +** or **-** button. If you press the **MUTE** button, the sound from the headphone is switched off.

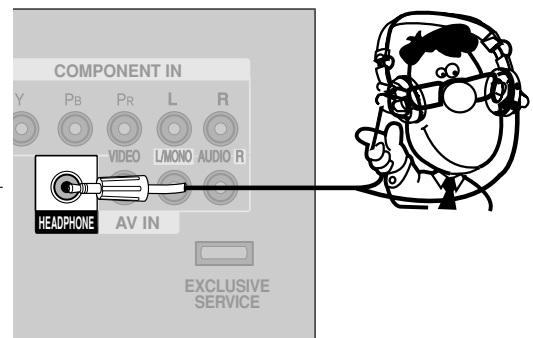

PC SETUP

This TV provides Plug and Play capability, meaning that the PC adjusts automatically to the TV's settings.


When connecting D-sub 15pin cable

1. How to connect

- 1 Connect the RGB output of the PC to the **RGB IN (PC)** jack on the set.
- 2 Connect the PC audio output to the **AUDIO IN (RGB/DVI)** jack on the set.

2. How to use

- Turn on the PC and the TV.
- Select **RGB-PC** input source by using the **INPUT** button on the remote control.

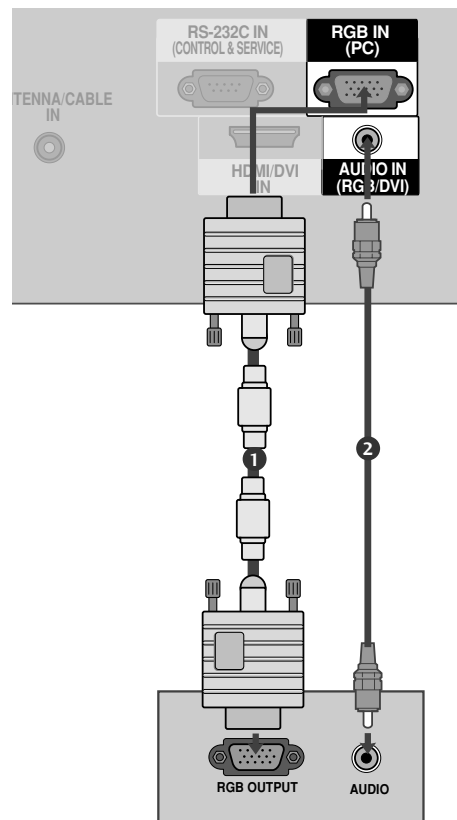


When connecting HDMI to DVI cable

1. How to connect

- 1 Connect the DVI output of the PC to the **HDMI/DVI IN** jack on the set.
- 2 Connect the PC audio output to the **AUDIO IN (RGB/DVI)** jack on the set.

2. How to use

- Turn on the PC and the TV.
- Select **HDMI** input source by using the **INPUT** button on the remote control.

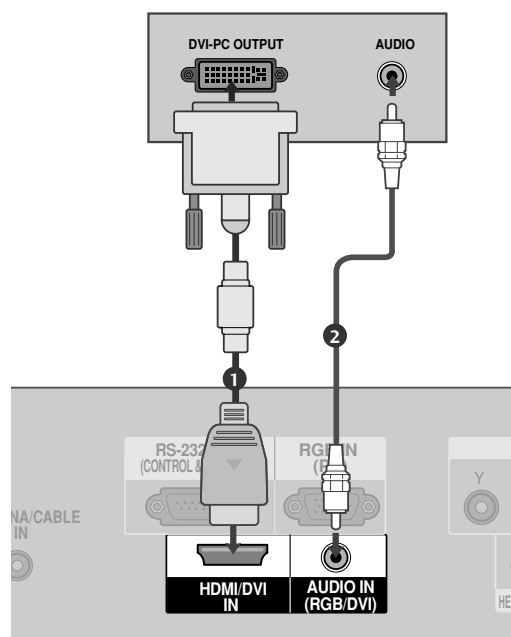

EXTERNAL EQUIPMENT SETUP

! NOTES

- ▶ To get the the best picture quality, adjust the PC graphics card to 852x480.
- ▶ Depending on the graphics card, DOS mode may not work if a HDMI to DVI Cable is in use.
- ▶ If the video doesn't fit the screen, try pressing the ADJUST button to adjust the screen position of TV.
- ▶ Check the image on your TV. There may be noise associated with the resolution, vertical pattern, contrast or brightness in PC mode. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.
- ▶ Avoid keeping a fixed image on the screen for a long period of time. The fixed image may become permanently imprinted on the screen.
- ▶ The synchronization input form for Horizontal and Vertical frequencies is separate.

Supported Display Specifications

RGB-PC, HDMI/DVI-PC mode

| Resolution | Horizontal Frequency(KHz) | Vertical Frequency(Hz) |
|------------|---------------------------|------------------------|
| 640x350 | 31.47 | 70.09 |
| 720x400 | 31.468 | 70.08 |
| 640x480 | 31.469 | 59.94 |
| 848x480 | 29.83 | 59.659 |
| 852x480 | 32.0 | 60.491 |
| 800x600 | 37.879 | 60.31 |
| 1024x768 | 48.363 | 60.00 |

Screen Setup for PC mode

Overview

When the RGB input of the set is connected to a PC output, select the RGB-PC as the main input mode.

After connecting RGB-PC to PC output and checking the screen quality.


When you change the resolution, select the proper resolution in present input to see the best picture appearance.

Adjustment for screen Resolution, Position, Size, and Phase

- 1 Press the **ADJUST** button and then use **▲** or **▼** button to select **Resolution**, **Position**, **Size**, or **Phase**.
- 2 Press the **ENTER** button and then use **▲ ▼ ◀ ▶** button to make appropriate adjustments.
 - The **Phase** adjustment range is 0 ~ +63.
 - The **Size** adjustment range is -30 ~ +30.
- 3 Press the **ENTER** button.

Auto Configuration and Initializing (Reset to original factory values)

- 1 Press the **ADJUST** button and then use **▲** or **▼** button to select **Auto. Config.** or **Reset**.
- 2 Press the **ENTER** button and then use **◀** or **▶** button to select **Yes**.
- 3 Press the **ENTER** button.

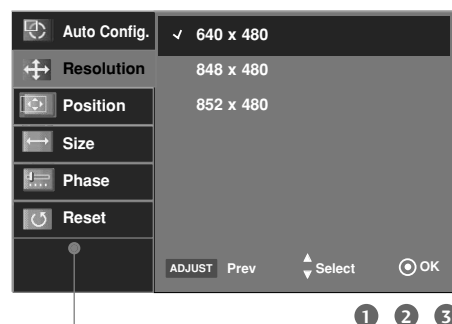

Auto Config. This function is to adjust picture position and minimizes image shaking automatically.


Resolution This function allows you select resolution of VGA/WVGA.

Position This function is to adjust picture to left/right and up/down as you prefer.

Size This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size will also change.

Phase This function allows you to remove any horizontal noise and clear or sharpen the image of characters.

Reset This function is to initialize the adjusted value.

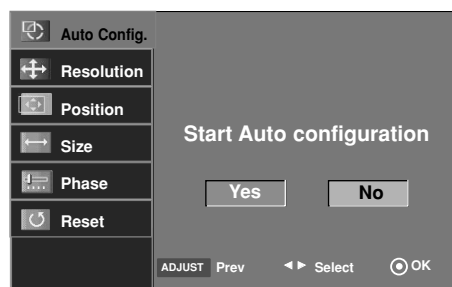

WATCHING TV / CHANNEL CONTROL

REMOTE CONTROL FUNCTIONS

When using the remote control, aim it at the remote control sensor on the TV.

SAP • Analog mode: Selects MTS sound (Mono, Stereo, or a SAP) ► **p.46**
• DTV mode: Changes the audio language.

PICTURE Selects the factory preset picture depend on the viewing environment. ► **p.34**

SOUND Selects the factory preset sound for type of program. ► **p.43**

TIMER Select the amount of time before your TV turns off automatically. ► **p.56**

VOLUME UP /DOWN Increase/decrease the sound level.

ADJUST Adjust the screen Auto config., Resolution, Position, Size Phase and Reset. ► **p.23**

MUTE Switch the sound on or off. ► **p.26**

CC Select a closed caption. ► **p.49**


CHANNEL UP/DOWN Select available channels.

MENU Displays the main menu.

BACK Tune to the last channel viewed.
Return to the previous menu.

EXIT Clear all on-screen displays and return to TV viewing from any menu.

THUMBSTICK (Up/Down/Left Right/ENTER) Navigate the on-screen menus and adjust the system settings to your preference.

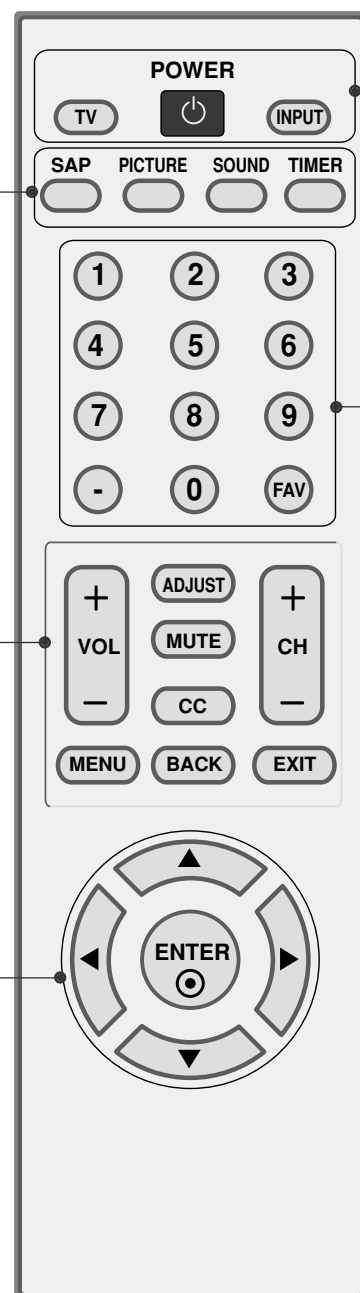

POWER Turns your TV on or off.

TV In AV, Component, RGB-PC, and HDMI input sources, screen returns to the last TV channel.


INPUT External input modes rotate in regular sequence: TV, AV, Component, RGB-PC, and HDMI. (AV, Component, RGB-PC, and HDMI input sources are linked automatically, only if a device is connected.)

NUMBER button

— (DASH) Used to enter a program number for multiple program channels such as 2-1, 2-2, etc.


FAV Scroll through the programmed Favorite channels. ► **p.30**

Installing Batteries

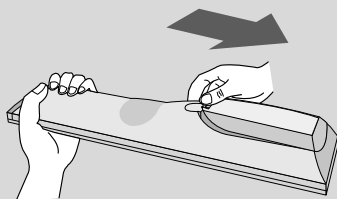

- Open the battery compartment cover on the back side and install the batteries matching correct polarity (+ with +, - with -).
- Install two 1.5V AAA batteries. Don't mix old or used batteries with new ones.
- Close cover.

Remote control effective range

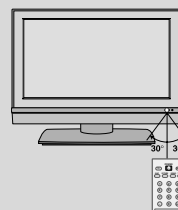


- Use a remote control up to 7 meters distance and 30 degree (left/right) within the receiving unit scope.
- Dispose of used batteries in a recycle bin to preserve environment.

WATCHING TV / CHANNEL CONTROL

TURNING ON TV

- 1 First, connect power cord correctly.
At this moment, the TV switches to standby mode.
 - In standby mode to turn TV on, press the ϕ/I , **INPUT**, **CH** (\blacktriangle or \blacktriangledown) button on the TV or press the **POWER**, **INPUT**, **TV**, **CH** (+ or -), **Number (0~9)** button on the remote control.
- 2 Select the viewing source by using the **INPUT** button on the remote control.
 - This TV is programmed to remember which power state it was last set to, even if the power cord is out.
- 3 When finished using the TV, press the **POWER** button on the remote control. The TV reverts to standby mode.

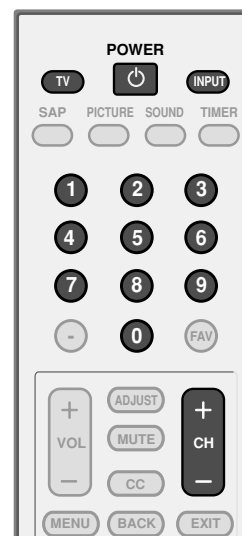

! NOTE

- If you intend to be away on vacation, disconnect the power plug from the wall power outlet.

CHANNEL SELECTION

- 1 Press the **CH** (+ or -) or **NUMBER** buttons to select a channel number.



VOLUME ADJUSTMENT

Adjust the volume to suit your personal preference.

- 1 Press the **VOL** (+ or -) button to adjust the volume.
- 2 If you want to switch the sound off, press the **MUTE** button.
- 3 You can cancel the Mute function by pressing the **MUTE** or **VOL** (+ or -) button.




ON-SCREEN MENUS SELECTION


Your TV's OSD (On Screen Display) may differ slightly from what is shown in this manual.

- 1 Press the **MENU** button and then use **▲** or **▼** button to select the each menu.
- 2 Press the **▶** button and then use **▲ ▼ ◀ ▶** button to display the available menus.


SETUP

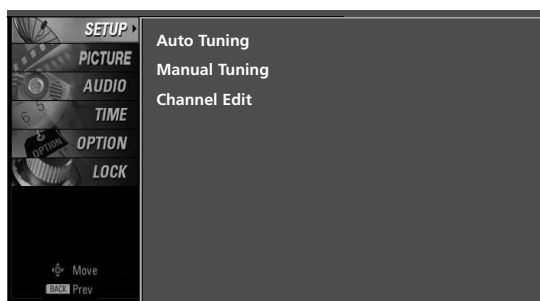


PICTURE

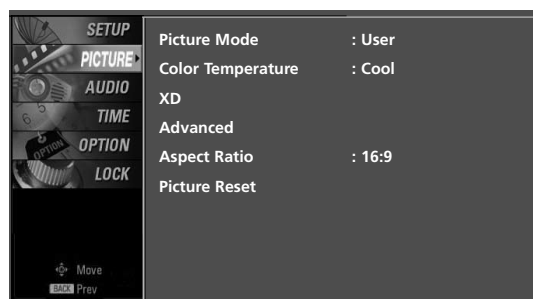


LOCK

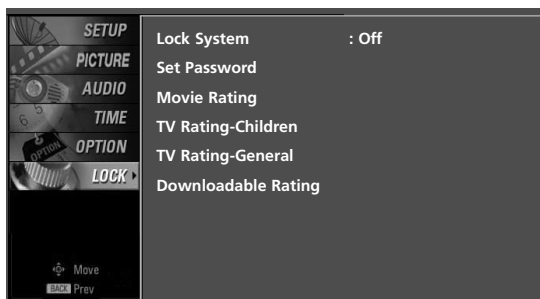


AUDIO

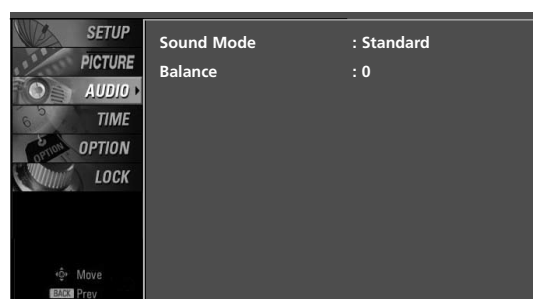

OPTION

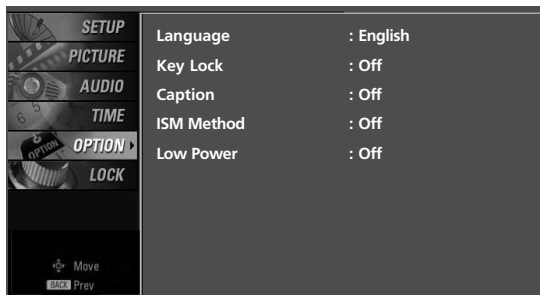

TIME

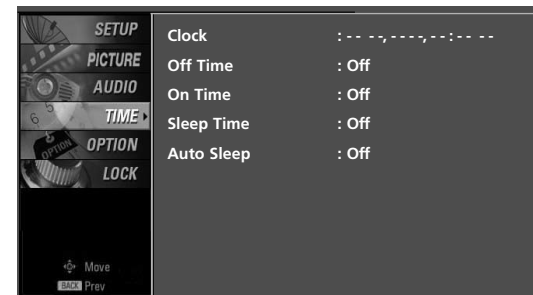

WATCHING TV / CHANNEL CONTROL


CHANNEL SEARCH

Auto Scan (Auto Tuning)

Automatically finds all channels available through antenna or cable inputs, and stores them in memory on the channel list.

Run Auto Tuning again after any Antenna/Cable connection changes.




A password is required to gain access to Auto Tuning menu if the Lock System is turned on.

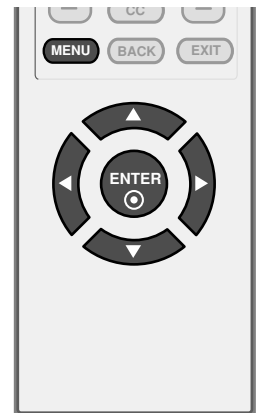

1 Press the **MENU** button and then use ▲ or ▼ button to select the **SETUP** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Auto Tuning**.


3 Press the **ENTER** button to begin the channel search. Allow **Auto Tuning** to complete the channel search cycle for **ANTENNA** and **CABLE**.

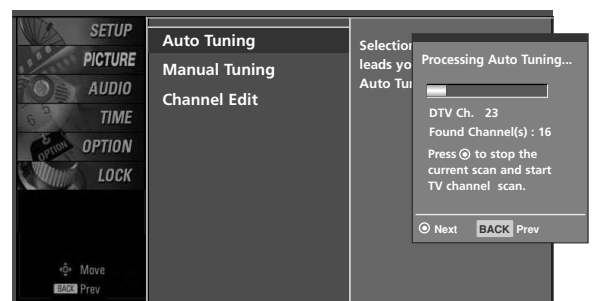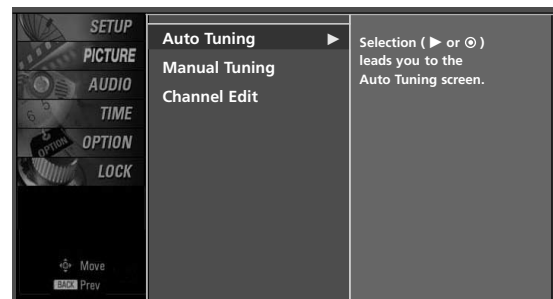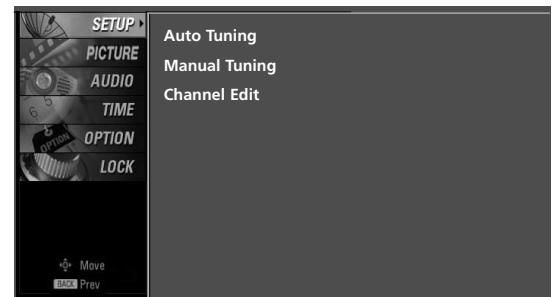

Add/Delete Channel (Manual Tuning)

A password is required to gain access to Manual Tuning menu if the Lock System is turned on.

If selecting DTV or CADTV input signal, you can view the on-screen signal strength monitor to see the quality of the signal being received.

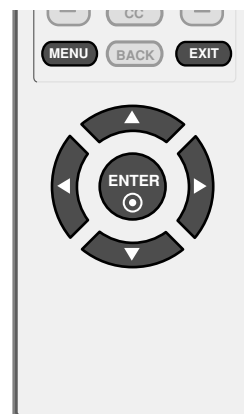

- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **SETUP** menu.


- 2 Press the ► button and then use ▲ or ▼ button to select **Manual Tuning**.

- 3 Press the ► button and then use ▲ or ▼ button to select **DTV**, **TV**, **CADTV**, and **CATV**.


- 4 Press the ► button and then use ▲ or ▼ button to select channel you want to add or delete.

- 5 Press the **ENTER** button to add or delete the channel.


- 6 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

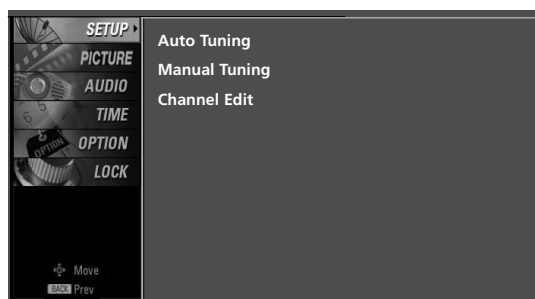

1

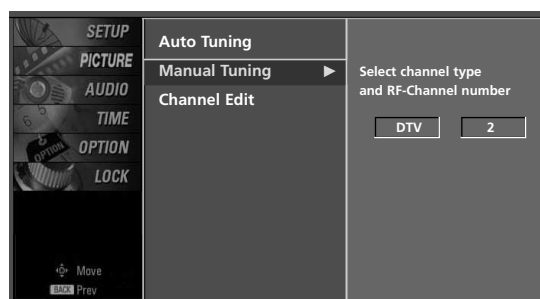

2

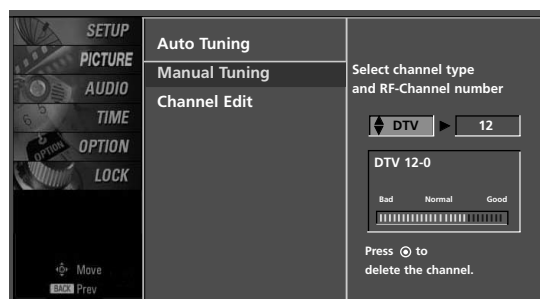

3 4 5

WATCHING TV / CHANNEL CONTROL

Channel Editing


There are two different ways in order to add or delete scanned channels. One is "Custom List" and the other is "Favorite List" in the channel list. Both of them are available after **Auto Tuning** on the **SETUP** menu.

A Custom List can be created by toggling each channel on or off with **ENTER** button.

You can create your own Favorite List. Use the **FAV** button on the remote control when a channel is highlighted and then add or delete the channel to/from your Favorite List.




- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **SETUP** menu.

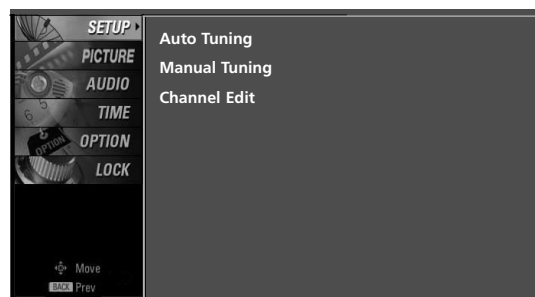

1

- 2 Press the ► button and then use ▲ or ▼ button to select **Channel Edit**.

- 3 Press the ► button and then use ▲ or ▼ button to select **TV**, **DTV**, **CATV**, and **CADTV**.

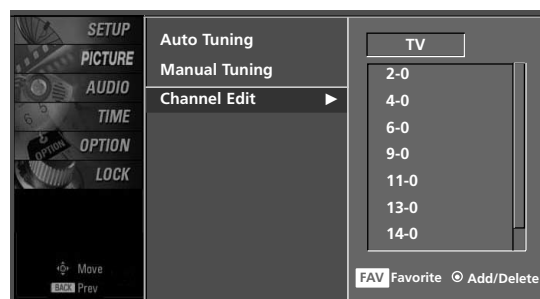


2

- 4 Press the ► button and then use ▲ or ▼ button to select channel and then use the **ENTER** button to add or delete it.

Press **FAV** button to add the channel to the Favorite List. The surfing icon will appear in back of that channel number.

- 5 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

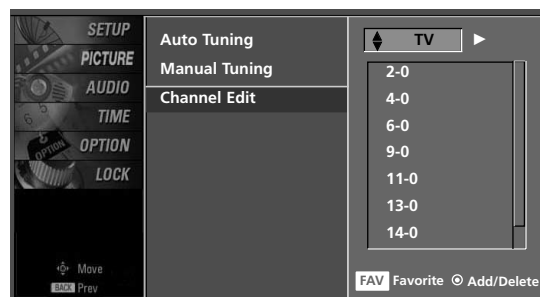


3 4

KEY LOCK

The TV can be set up so that it can only be used with the remote control.

This feature can be used to prevent unauthorized viewing by locking out the front panel controls.

This TV is programmed to remember which option it was last set to even if you turn the TV off.

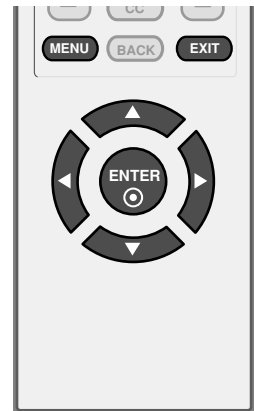


- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.


- 2 Press the ► button and then use ▲ or ▼ button to select **Key Lock**.

- 3 Press the ► button and then use ▲ or ▼ button to select **On** or **Off**.

- 4 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

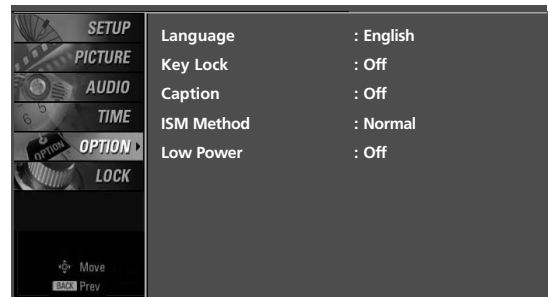

1

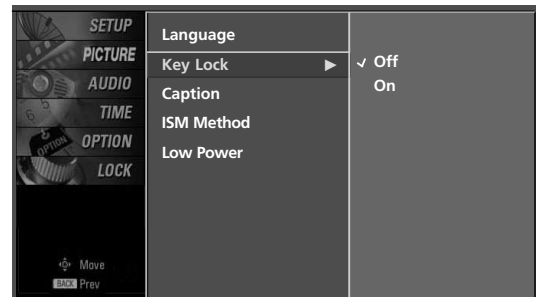

2 3

PICTURE CONTROL

PICTURE SIZE (ASPECT RATIO) CONTROL

This feature allows an analog picture with a 4:3 aspect ratio is displayed on your TV. When you receive an analog picture with a 4:3 aspect ratio on your 16:9 TV, you need to specify how the picture is to be displayed.

- RGB-PC input source use 4:3 or 16:9 aspect ratio.



! NOTE


- ▶ If a fixed image is displayed on the screen for a long time, the image may become imprinted on the screen and remain visible. This phenomenon is common to all manufactures and in consequence the manufactures warranty does not cover the product bearing this phenomenon.

- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **PICTURE** menu.


- 2 Press the ► button and then use ▲ or ▼ button to select **Aspect Ratio**.

- 3 Press the ► button and then use ▲ or ▼ button to select the desired picture option (**Set By Program**, **4:3**, **16:9**, or **Zoom**).

- 4 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

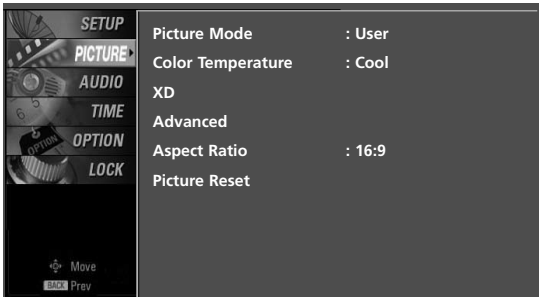

1

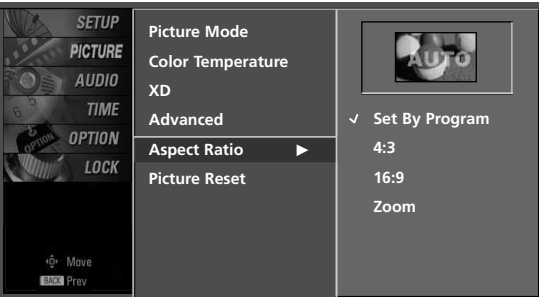

2 3

Set by program

Selects the proper picture proportion to match the source's image.

(4:3 → 4:3)



(16:9 → 16:9)



4:3

Choose 4:3 when you want to view a picture with an original 4:3 aspect ratio.



16:9

Adjust the picture horizontally, in a linear proportion to fill the entire screen.



Zoom

Choose Zoom when you want to view the picture without any alteration. However, the top and bottom portions of the picture will be cropped.



PICTURE CONTROL

PRESET PICTURE SETTINGS

Picture Mode - Preset

Picture Mode adjusts the TV for the best picture appearance. Select the preset value in the Picture Mode menu based on the program category.

Dynamic, Standard, Mild Settings are preset for the optimum picture quality at the factory and are not adjustable.



In the **User** mode only, user can directly adjust the contrast, brightness, color, sharpness, tint.



- 1 Press the **PICTURE** button repeatedly to select the picture appearance setup option as below :
Dynamic, Standard, Mild, and User (your own settings).

- 2 Press the **EXIT** button to save and return to TV viewing.

- You can also use the **PICTURE** menu to adjust **Picture Mode**.

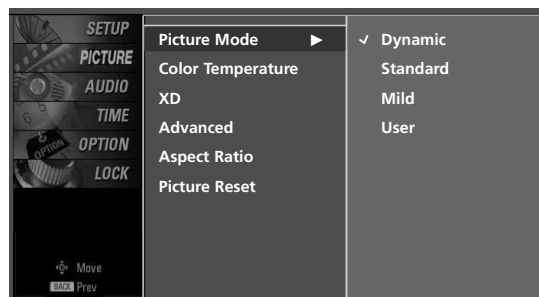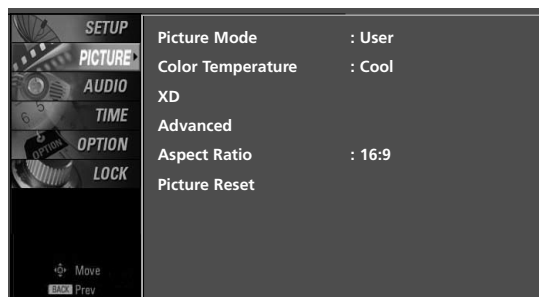

Color Tone - Preset

Choose one of three automatic color adjustments. Set to warm to enhance hotter colors such as red, or set to cool to see less intense colors with more blue.

When selecting Picture Mode options (Dynamic, Standard and Mild), **Color Temperature** is automatically change.


When selecting Picture Mode options (User), you can choose the **Color Temperature**.

1 Press the **MENU** button and then use ▲ or ▼ button to select the **PICTURE** menu.


2 Press the ► button and then use ▲ or ▼ button to select **Color Temperature**.

3 Press the ► button and then use ▲ or ▼ button to select either **Cool**, **Medium**, **Warm** or **User**.

4 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

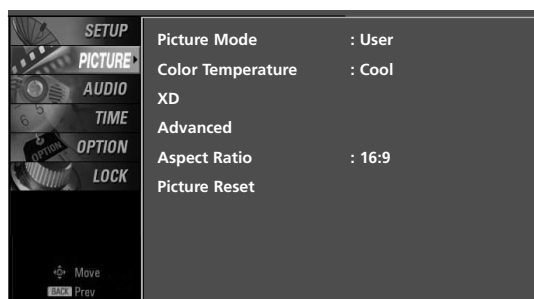

1

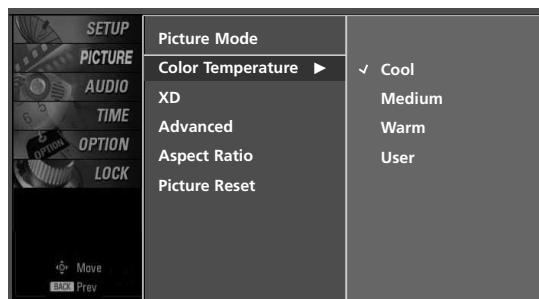

2 3

PICTURE CONTROL

MANUAL PICTURE ADJUSTMENT

Picture Mode - User Mode

Adjust the picture appearance to suit your preference and viewing situations.



1 Press the **MENU** button and then use ▲ or ▼ button to select the **PICTURE** menu.


2 Press the ► button and then use ▲ or ▼ button to select **Picture Mode**.

3 Press the ► button and then use ▲ or ▼ button to select **User**.


4 Press the ► button and then use ▲ or ▼ button to select the desired picture option (**Contrast**, **Brightness**, **Color**, **Sharpness**, or **Tint**).

5 Press the ► button and then use ◀ or ▶ button to make appropriate adjustments.

6 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

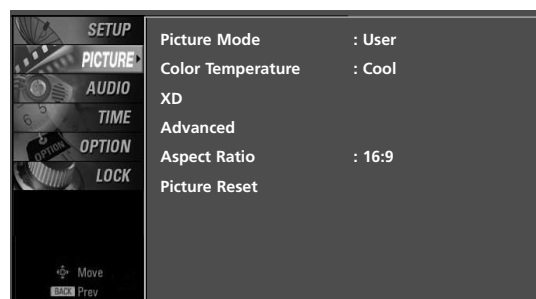


1

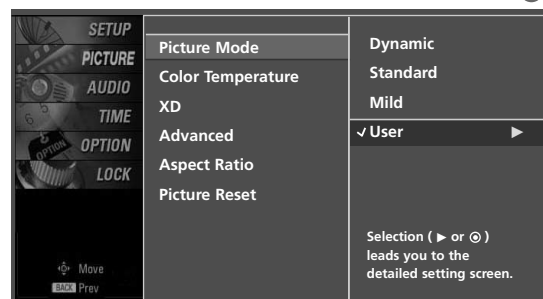

2 3



4

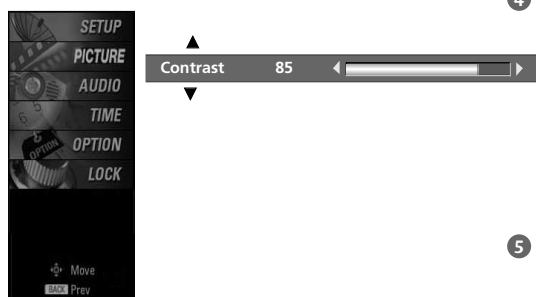

5

Color Tone - User Mode

You can also adjust the detailed settings (Red, Green, Blue) by selecting the **Color Temperature-User** menu.
This feature operate only if the picture mode set **User**.



1 Press the **MENU** button and then use ▲ or ▼ button to select the **PICTURE** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Color Temperature**.


3 Press the ► button and then use ▲ or ▼ button to select **User**.

4 Press the ► button and then use ▲ or ▼ button to select **Red**, **Green**, or **Blue**.


5 Press the ► button and then use ◀ or ▶ button to make appropriate adjustments.

- The adjustment range of **Red**, **Green**, or **Blue** is -20~ +20.


6 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

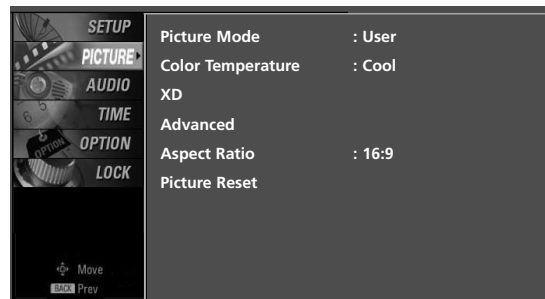

1

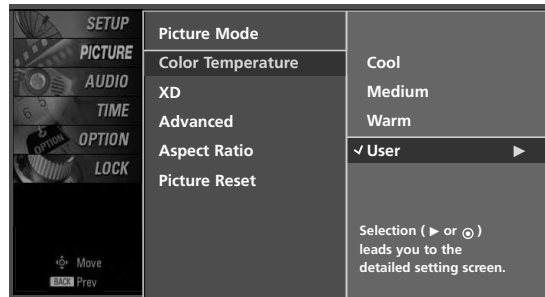

2 3

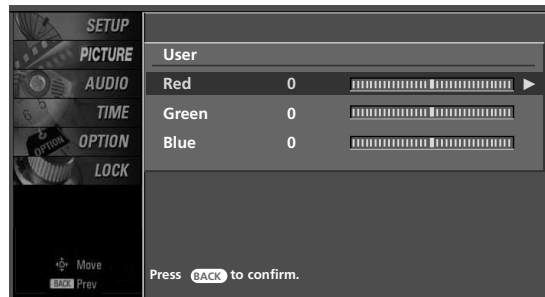

4



5

PICTURE CONTROL

XD - PICTURE IMPROVEMENT TECHNOLOGY

XD is LG's unique picture improving technology to display a real HD source through an advanced digital signal processing algorithm.

When selecting Picture Mode options (Dynamic, Standard, and Mild), XD is automatically changed to Auto.

When selecting Picture Mode option (User), you can choose the Auto / Manual.


When selecting the Manual, you can adjust the XD Contrast, XD Color and XD Noise.



1 Press the **MENU** button and then use **▲** or **▼** button to select the **PICTURE** menu.

2 Press the **▶** button and then use **▲** or **▼** button to select **XD**.

3 Press the **▶** button and then use **▲** or **▼** button to select **Auto** or **Manual**.

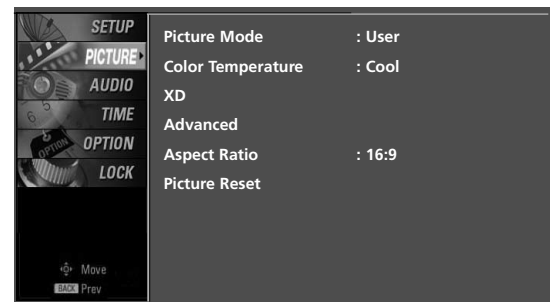


1

Selecting the Manual

1. Press the **▶** button and then use **◀** or **▶** button to select **XD Contrast**, **XD Color** or **XD Noise**.

- **XD Contrast:** Optimizing the contrast automatically according to the brightness of the reflection.
- **XD Color:** Adjusting the colors of the reflection automatically to reproduce as closely as possible to the natural colors.
- **XD Noise :** Removing the noise up to the point where it does not damage the original picture.

2. Use the **▲** or **▼** button to select **On** or **Off**.

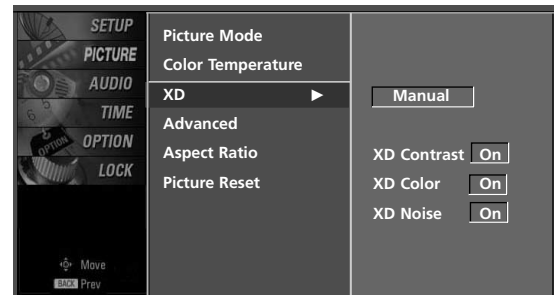

2 3

4 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

ADVANCED - BLACK (DARKNESS) LEVEL

Adjusting the contrast and the brightness of the screen using the black level of the screen.

This feature operates only in AV or HDMI mode.



- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **PICTURE** menu.

- 2 Press the ► button and then use ▲ or ▼ button to select **Advanced**.

- 3 Press the ► button and then use ▲ or ▼ button to select **Black level Low** or **High**.


- **Low**

The screen gets darker.


- **High**

The screen gets brighter.

- 4 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

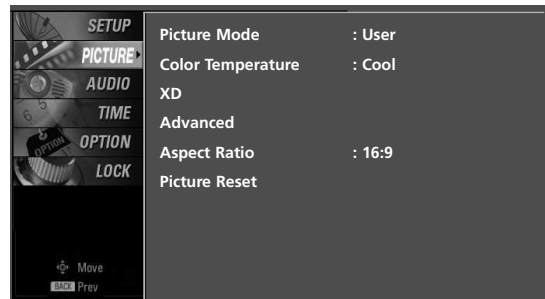

1

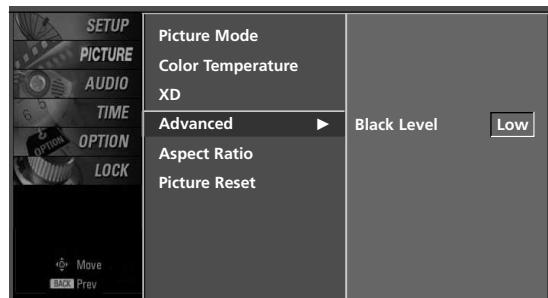

2 3

PICTURE CONTROL

IMAGE STICKING MINIMIZATION (ISM) METHOD

A frozen still picture from a PC/video game displayed on the screen for prolonged periods will result in a ghost image. Use our unique method to minimize any fixed image on the screen.

1 Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.

2 Press the ► button and then use ▲ or ▼ button to select **ISM Method**.

3 Press the ► button and then use ▲ or ▼ button to select either **Normal**, **Orbiter**, **Inversion**, or **White Wash**.

■ Normal

If image sticking is never a problem, ISM is not necessary - set to Normal.

■ Orbiter

Orbiter may help prevent ghost images. However, it is best not to allow any fixed image to remain on the screen. To avoid a ghost image on the screen, the image will move.

■ Inversion

Inversion will automatically invert the plasma display panel color every 30 minutes.

■ White Wash


White Wash removes ghost images from the screen.

Use sparingly. Watch the TV normally for a while before using this feature to see if the ghost image disappears on its own.


! NOTE

- An excessive ghosted image may be impossible to clear entirely with White Wash. To return to normal viewing, press the any button.

4 Press **EXIT** button to return to TV viewing or press **MENU** button to return to the previous menu.

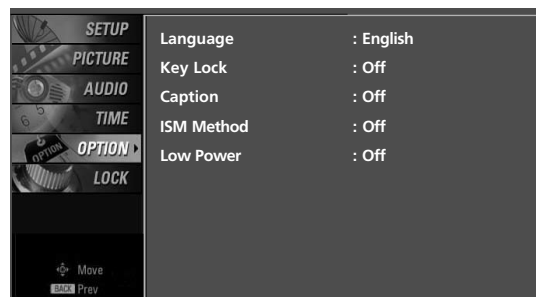

1

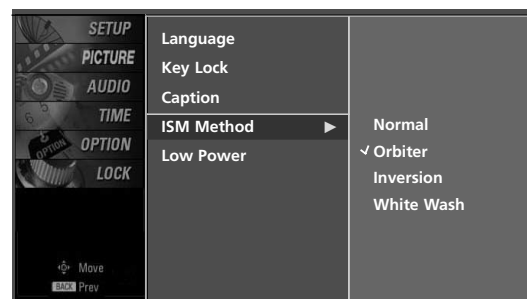

2 3

LOW - POWER PICTURE MODE

Low power reduces the display power consumption.




1 Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Low Power**.

3 Press the ► button and then use ▲ or ▼ button to select **On** or **Off**.

■ When you select **On**, the screen darkens.

4 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

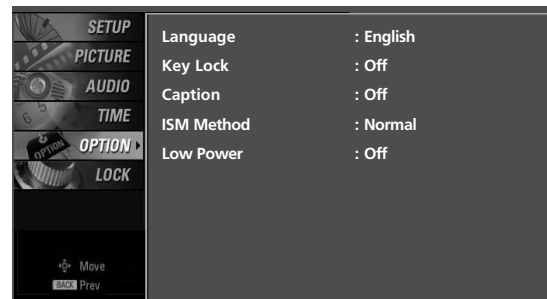

1




2 3

PICTURE CONTROL

PICTURE RESET

Use to quickly reset all the Picture menu options to their original factory preset values.

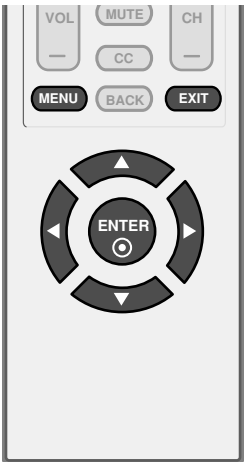


- 1


Press the **MENU** button and then use ▲ or ▼ button to select the **PICTURE** menu.
- 2

Press the ► button and then use ▲ or ▼ button to select **Picture Reset**.
- 3

Press the ► button to reset the Picture menu options to original values.

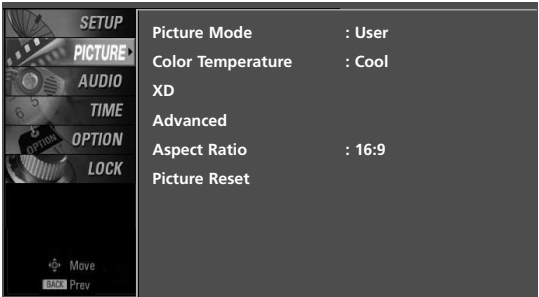

1

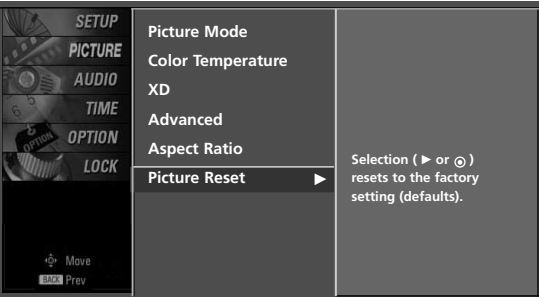


2 3

SOUND & LANGUAGE CONTROL

PRESET SOUND SETTINGS (SOUND MODE)

Sound Mode lets you enjoy the best sound without any special adjustment because the TV sets the appropriate sound options based on the program content.


Standard, Music, Movie, and Sports are preset for good sound quality at the factory and are not adjustable.

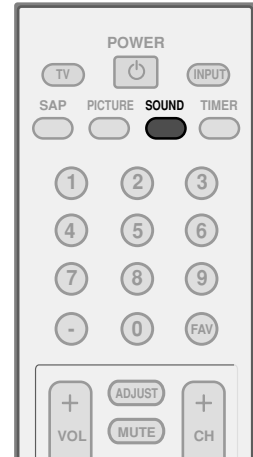

- 1 Press the **SOUND** button repeatedly to select the appropriate sound setup as below :
Standard, Music, Movie, Sports, and User (your own settings).

- 2 Press the **EXIT** button to save and return to TV viewing.

■ You can also adjust **Sound Mode** in the **AUDIO** menu.

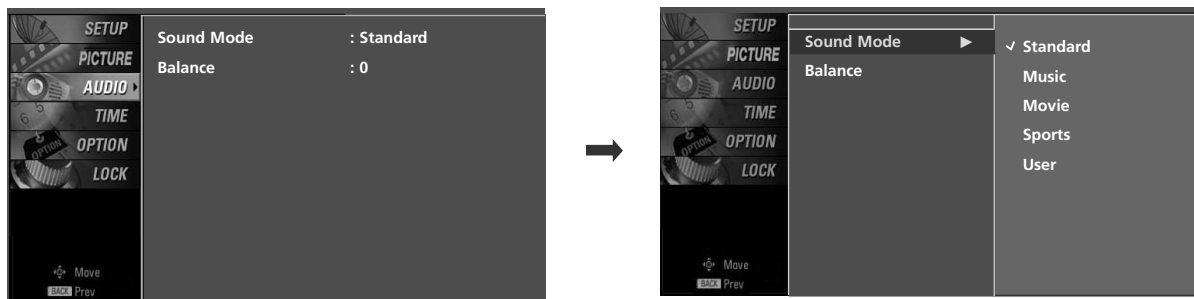


SOUND & LANGUAGE CONTROL

SOUND SETTING ADJUSTMENT - USER MODE


Adjust the sound to suit your taste and room situations.



- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **AUDIO** menu.

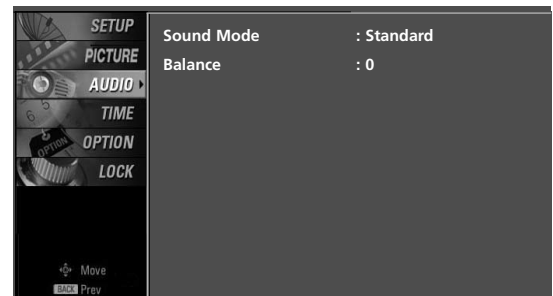

- 2 Press the ► button and then use ▲ or ▼ button to select **Sound Mode**.

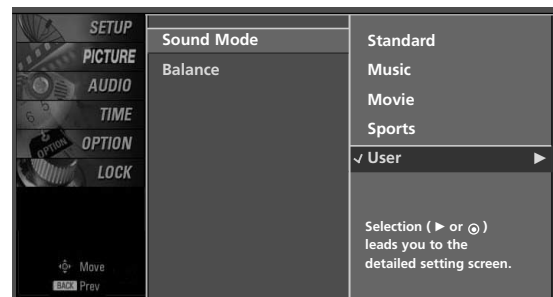


- 3 Press the ► button and then use ▲ or ▼ button to select **User**.

- 4 Press the ► button and then use ▲ or ▼ button to select the desired sound option (**Treble** or **Bass**).



- 5 Press the ► button and then use ◀ or ▶ button to make appropriate adjustments.

- 6 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

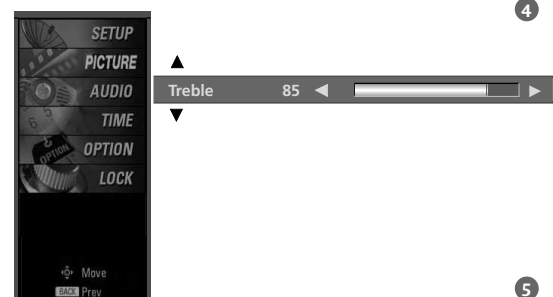

BALANCE

Adjust the left/right sound of speaker to suit your taste and room situations.




1 Press the **MENU** button and then use ▲ or ▼ button to select the **AUDIO** menu.


2 Press the ► button and then use ▲ or ▼ button to select **Balance**.

3 Press the ► button and then use ◀ or ▶ button to make appropriate adjustments.


4 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

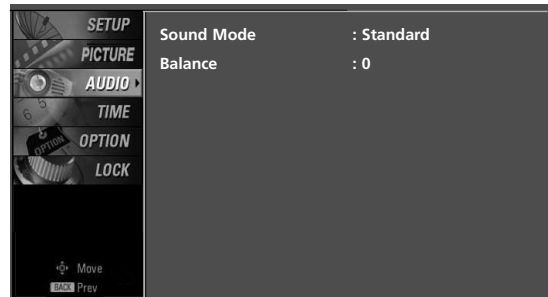

1

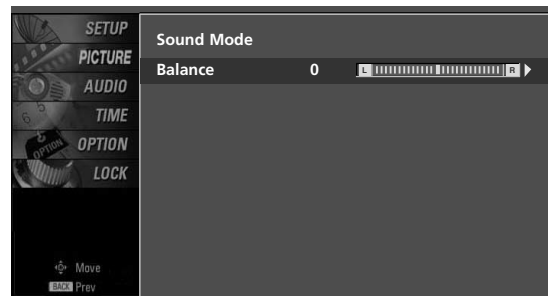

2

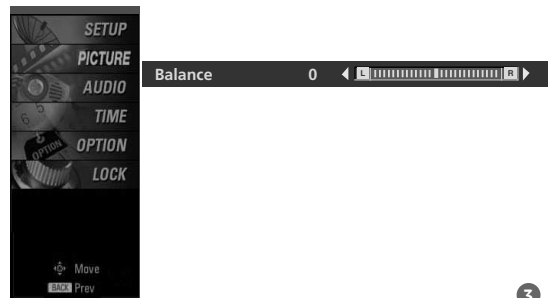

3

SOUND & LANGUAGE CONTROL

STEREO/SAP BROADCASTS SETUP

This TV can receive MTS stereo programs and any SAP (Secondary Audio Program) that accompanies the stereo program if the station transmits an additional sound signal as well as the original one and when you select Stereo or SAP on the remote control.

Mono sound is automatically received if the broadcast is only in Mono; even though Stereo or SAP has been selected.

Select Mono if you want to listen to the mono sound in remote areas during stereo/SAP broadcasting.

Stereo or SAP can be received in Analog channel.



- 1 Use the **SAP** button to select your desired MTS mode in analog signal. Each time you press the **SAP** button, **Mono**, **Stereo**, or **SAP** appear in turn.
 - If other languages available on the digital signal, select them with the **SAP** button.

- 2 Press **EXIT** button to save and return to TV viewing.

AUDIO LANGUAGE

Other languages may be available if a digital signal is provided by the broadcasting station.
This feature operates only in DTV/CADTV mode.




1 Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Language**.


3 Press the ► button and then use ◀ or ▶ button to select **Audio**.

4 Use ▲ or ▼ button to select **English, Spanish, or French**.

5 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

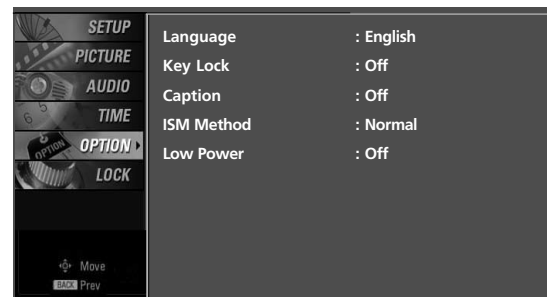

1

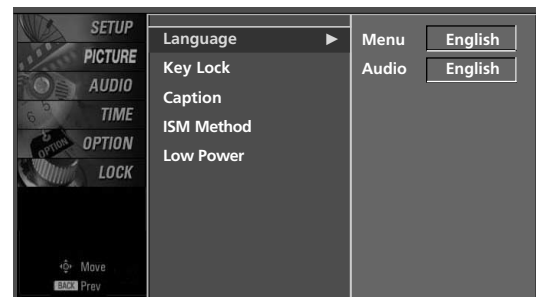

2 3 4

SOUND & LANGUAGE CONTROL

ON-SCREEN MENUS LANGUAGE SELECTION

The menus can be shown on the screen in the selected language. First select your language.




1 Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Language**.


3 Press the ► button and then use ◀ or ▶ button to select **Menu**.

4 Use ▲ or ▼ button to select your desired language.
From this point on, the on-screen menus will be shown in the selected language.

5 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

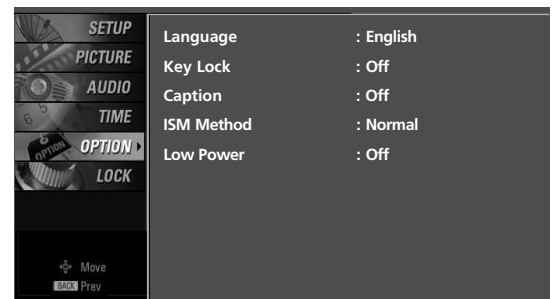

1

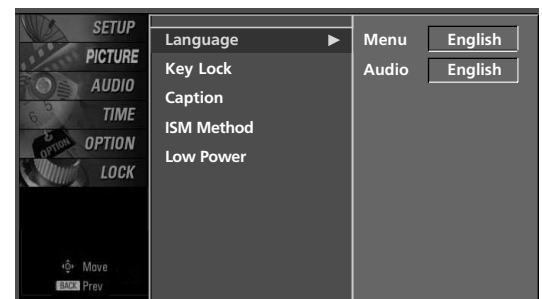

2 3 4


CAPTION MODE

Caption must be provided to help people with hearing loss watch TV.



- 1 Use the **CC** button to select Caption **On** or **Off**.
 - When selecting **Off**, Sub-menus for Analog, DTV, and Digital Option become disabled.
- 2 Press the **EXIT** button to save and return to TV viewing.

- You can also adjust **Caption** in the **OPTION** menu.

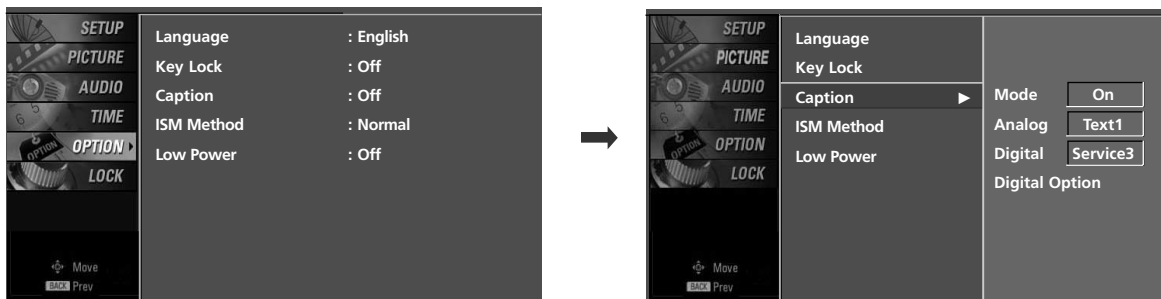

SOUND & LANGUAGE CONTROL

Analog Broadcasting System Captions

Select a caption mode for displaying captioning information if provided on a program. Analog caption displays information at any position on the screen and is usually the program's dialog.

Caption/Text, if provided by the broadcaster, would be available for both digital and analog channels on the Antenna/Cable.

This TV is programmed to memorize the caption/text mode which was last set when you turn the power off.

This function is only available when **Caption Mode** is set **On**.



1 Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Caption**.

3 Press the ► button and then use ◀ or ▶ button to select **Analog**.



4 Use ▲ or ▼ button to select **CC1 ~ 4, Text1 ~ 4**

■ CAPTION

The term for the words that scroll across the bottom of the TV screen; usually the audio portion of the program provided for the hearing impaired.

■ TEXT

The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster.

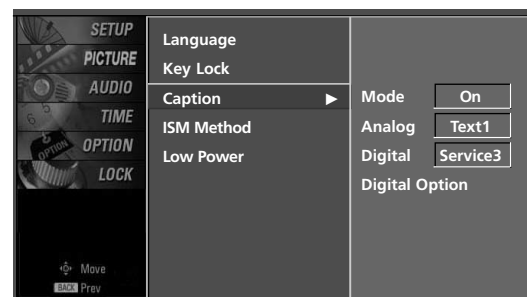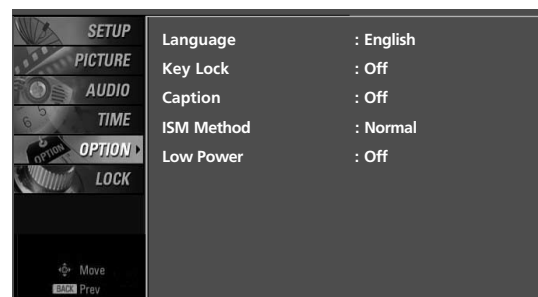

3 4


5 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

Digital Broadcasting System Captions

Choose the language you want the DTV/CADTV Captions to appear in.

Other Languages can be chosen for digital sources only if they are included on the program.

This function is only available when **Caption Mode** is set **On**.

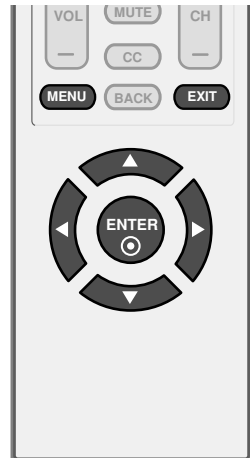


1 Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Caption**.


3 Press the ► button and then use ◀ or ▶ button to select **Digital**.

4 Use ▲ or ▼ button to select **Service1 ~ Service6**.

5 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

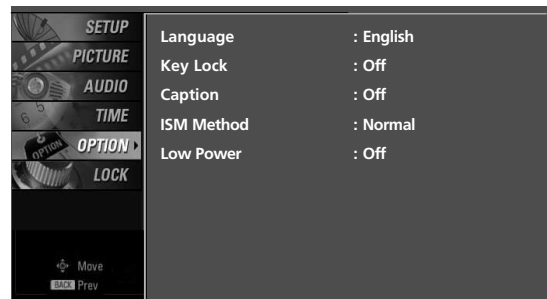

1

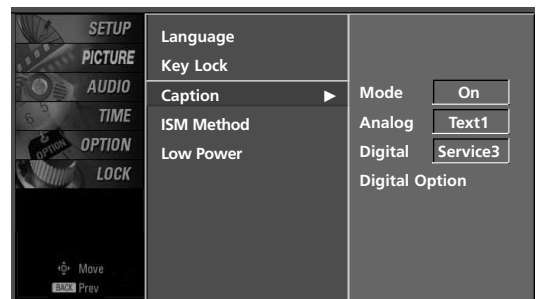

2 3 4

SOUND & LANGUAGE CONTROL

Caption Option

Customize the DTV/CADTV captions that appear on your screen.

This function is only available when **Caption Mode** is set **On**.

1 Press the **MENU** button and then use ▲ or ▼ button to select the **OPTION** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Caption**.

3 Press the ► button and then use ◀ or ▶ button to select **Digital Option**.


4 Press the ► button and then use ▲ or ▼ button to select **Custom**.

5 Use ◀ or ▶ button to customize the **Style**, **Font**, etc., to your preference.


A preview icon is provided at the bottom of the screen, use it to see the caption language.

- **Size** : Set the word size.
- **Font** : Select a typeface for the text.
- **Text Color** : Choose a color for the text.
- **Text Opacity** : Specify the opacity for the text color.
- **Bg (Background) Color** : Select a background color.
- **Bg (Background) Opacity** : Select the opacity for the background color.
- **Edge Type** : Select an edge type.
- **Edge Color** : Select a color for the edges.


6 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

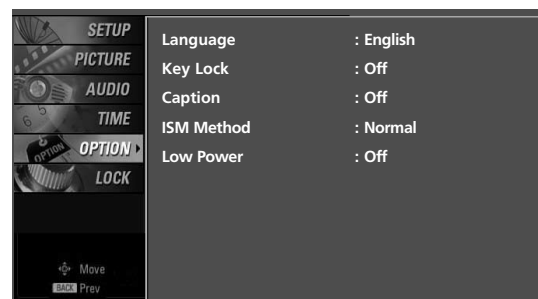

1

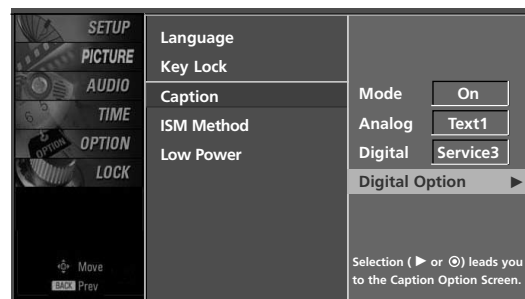

2 3

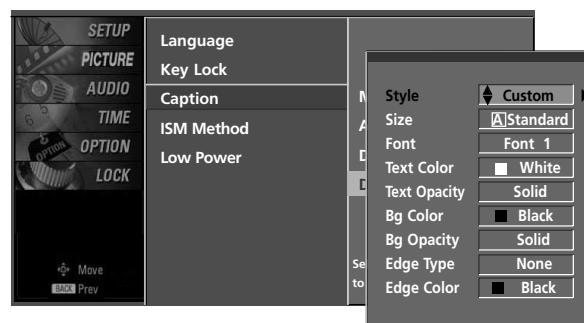

4 5

TIME SETTING

CLOCK SETTING

Auto Clock Setup

The time is set automatically from a digital channel signal. The digital channel signal includes information for the current time provided by the broadcasting station. Set the clock manually if the current time is set incorrectly by the auto clock function.



1 Press the **MENU** button and then use ▲ or ▼ button to select the **TIME** menu.




2 Press the ► button and then use ▲ or ▼ button to select **Clock**.

3 Press the ► button and then use ▲ or ▼ button to select **Auto**.

4 Press the ► button and then use ▲ or ▼ button to select your viewing area time zone: **Eastern, Central, Mountain, Pacific, Alaska** or **Hawaii**.

5 Press the ► button and then use ▲ or ▼ button to select **Auto, Off, On**, depending on whether or not your viewing area observes Daylight Saving time.

6 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

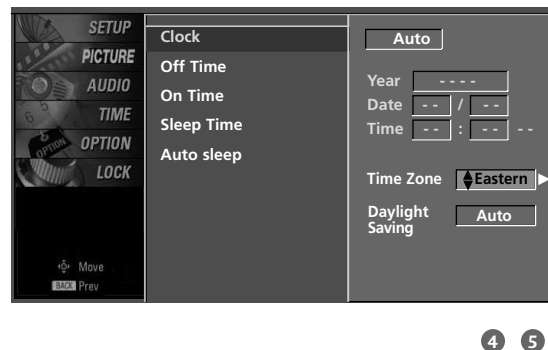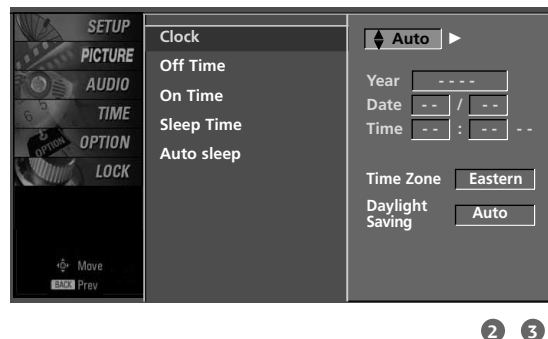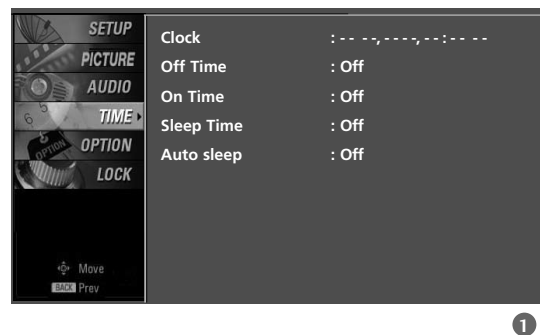

TIME SETTING

Manual Clock Setup

If the current time setting is wrong, reset the clock manually.




- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **TIME** menu.

- 2 Press the ► button and then use ▲ or ▼ button to select **Clock**.


- 3 Press the ► button and then use ▲ or ▼ button to select **Manual**.

- 4 Press the ► button and then use ◀ or ▶ button to select either the year, date, or time option. Once selected, use the ▲ or ▼ button to set the year, date, and time options.

- 5 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

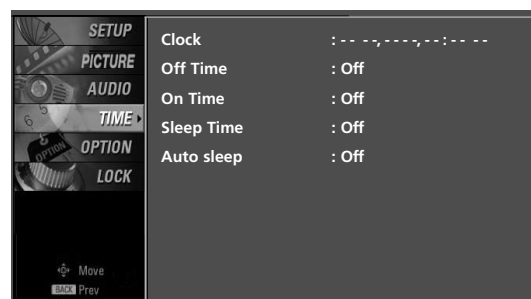

1

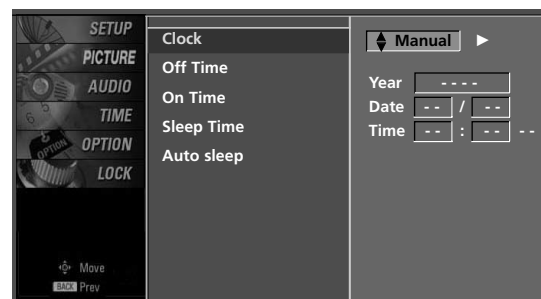

2 3

AUTO ON/OFF TIME SETTING

This function operates only if the current time has been set.
The **Off Time** function overrides the **On Time** function if they are both set to the same time.

The TV must be in standby mode for the **On Time** to work.
If you do not press any button within 2 hours after the TV turns on with the **On Time** function, the TV will automatically revert to standby mode.



1 Press the **MENU** button and then use ▲ or ▼ button to select the **TIME** menu.

2 Press the ► button and then use ▲ or ▼ button to select **Off Time** or **On Time**.

3 Press the ► button and then use ▲ or ▼ button to select **On**.
■ To cancel the **On/Off time** function, select **Off**.


4 Press the ► button and then use ▲ or ▼ button to set the hour.

5 Press the ► button and then use ▲ or ▼ button to set the minutes.


6 **Only On Time**
Press the ► button and then use ▲ or ▼ button to select the channel at turn-on.

Press the ► button and then use ▲ or ▼ button to set the sound level at turn-on.

7 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

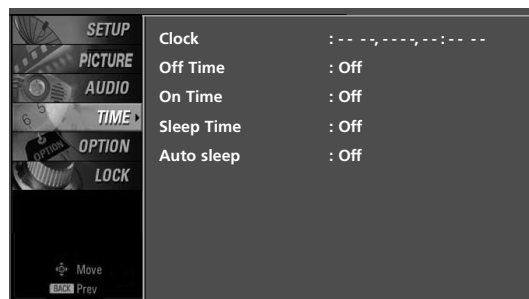

1

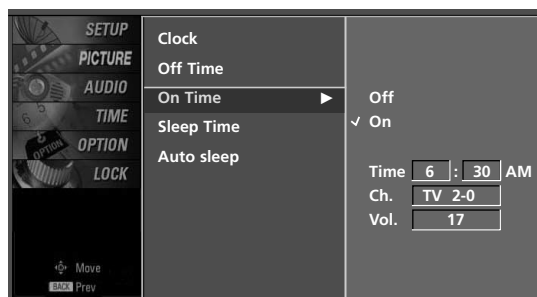

2 3 4 5 6

TIME SETTING


SLEEP TIME SETTING

The Sleep Time turns the TV off at the preset time.
Note that this setting is cleared when the TV is turned off.



- 1 Press the **TIMER** button repeatedly to select the number of minutes. First the **Off** option appears on the screen, followed by the following sleep timer options : 10, 20, 30, 60, 90, 120, 180, and 240 minutes.
- 2 When the number of minutes you want is displayed on the screen, press the **ENTER** button. The timer begins to count down from the number of minutes selected.
- 3 To check the remaining minutes before the TV turns off, press the **TIMER** button once.
- 4 To cancel the Sleep Time, press the **TIMER** button repeatedly to select **Off**.

■ You can also set up the **Sleep Time** in the **TIME** menu.

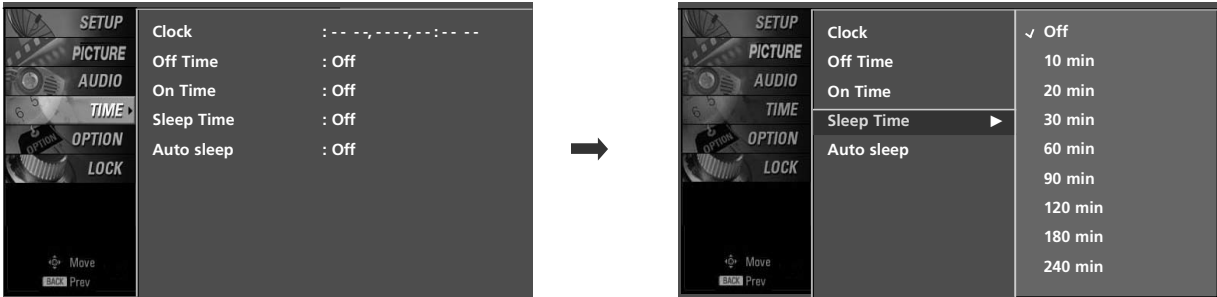

AUTO SHUT-OFF SETTING

If set to on and there is no input signal, the TV turns off automatically after 10 minutes.




1 Press the **MENU** button and then use ▲ or ▼ button to select the **TIME** menu.


2 Press the ► button and then use ▲ or ▼ button to select **Auto sleep**.

3 Press the ► button and then use ▲ or ▼ button to select **On** or **Off**.

4 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

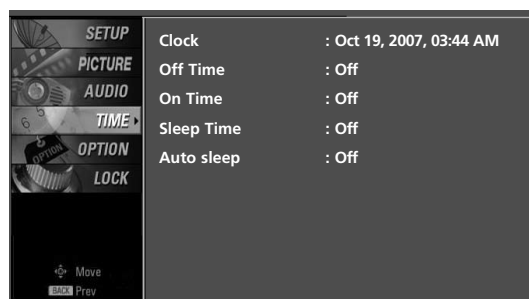

1

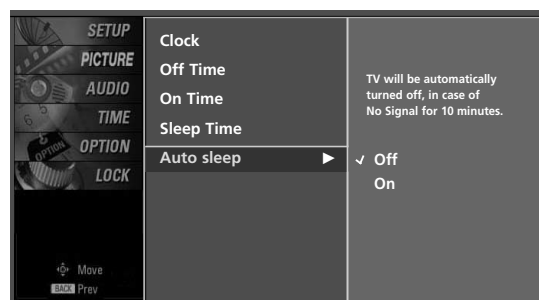

2 3

PARENTAL CONTROL / RATINGS

Parental Control can be used to block specific ratings.

The Parental Control Function (V-Chip) is used to block program viewing based on the ratings sent by the broadcasting station. The default setting is to allow all programs to be viewed. Viewing can be blocked by choosing the type of the program and the categories. It is also possible to block all program viewing for a time period. To use this function, the following must be done :

1. Set ratings and categories to be blocked.
2. Specify a password
3. Enable the lock

V-Chip rating and categories

Rating guidelines are provided by broadcasting stations. Most television programs and television movies can be blocked by TV Rating and/or Individual Categories. Movies that have been shown at the theaters or direct-to-video movies use the Movie Rating System (MPAA) only.

Ratings for Television programs including made-for-TV movies :

- | | |
|---------------------------------------|----------------------------------|
| ■ TV-G (General audience) | ■ TV-MA (Mature audience only) |
| ■ TV-PG (Parental guidance suggested) | ■ TV-Y (All children) |
| ■ TV-14 (Parents strongly cautioned) | ■ TV-Y7 (Children 7 years older) |


SET PASSWORD & LOCK SYSTEM

Setting up Your Password

Set up blocking schemes to block specific ratings.
A password is required to gain access to this menu.

- 1 Press the **MENU** button and then use the ▲ or ▼ button to select the **LOCK** menu. Then, press the ► button.

- Enter the password as requested.
- The TV is set up with the initial password "0-0-0-0".

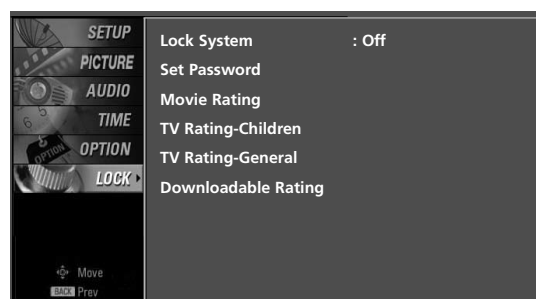


Set Password

Change the password by inputting a new password twice.


- 1 After inputting the password, use the ▲ or ▼ button to choose **Set password**.
- 2 Press the ► button and then choose any 4 digits for your new password.
As soon as the 4 digits are entered, re-enter the same 4 digits on the **Confirm**.
Then your changed password has been memorized.
- 3 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

! NOTE

- If you ever forget your password, key in '7', '7', '7', '7' on the remote control.

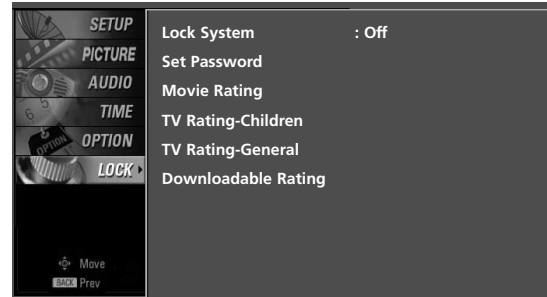

1

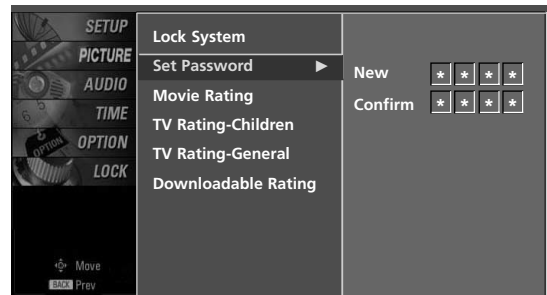


2

Lock System


Enables or disables the blocking scheme you set up previously.

- 1 After inputting the password, use the ▲ or ▼ button to choose **Lock System**.
- 2 Press the ► button and then use the ▲ or ▼ button to select **On** or **Off**.

■ When you select **On**, the Lock System is enable.
- 3 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

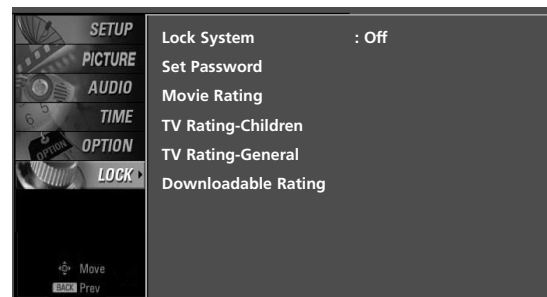

1

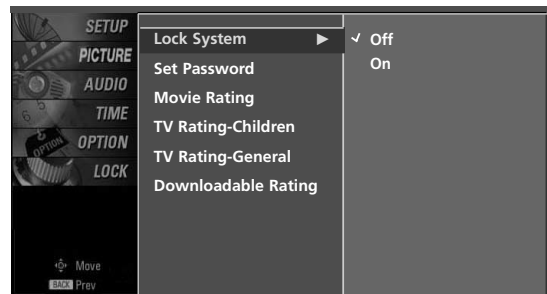

2

PARENTAL CONTROL / RATINGS

MOVIE & TV RATING

Movie Rating (MPAA) - *for USA only*

Blocks movies according to the movie ratings limits specified, so children cannot view certain movies. You can set the ratings limit by blocking out all the movies with the ratings above a specified level. Keep in mind that the movie ratings limit only applies to movies shown on TV, not TV programs, such as soap operas.



1 After inputting the password, use the ▲ or ▼ button to choose **Movie Rating**.

2 Press the ► button and then use the ▲ or ▼ button to select **G, PG, PG-13, R, NC-17** or **X**.

- G (General audience)
- PG (Parental guidance suggested)
- PG-13 (Parents strongly cautioned)
- R (Restricted)
- NC-17 (No one 17 and under admitted)
- X (Adult only)
- Blocking Off (Permits all programs)

► If you set PG-13 : G and PG movies will be available, PG-13, R, NC-17 and X will be blocked.

3 Press **EXIT** button to return to TV viewing or press **BACK** button to return to the previous menu.

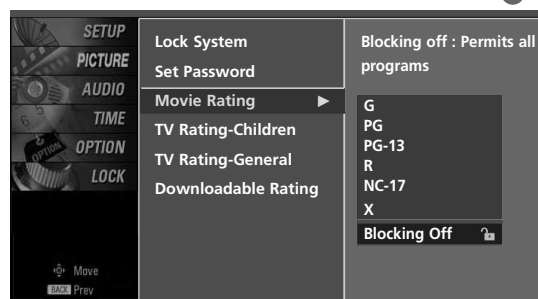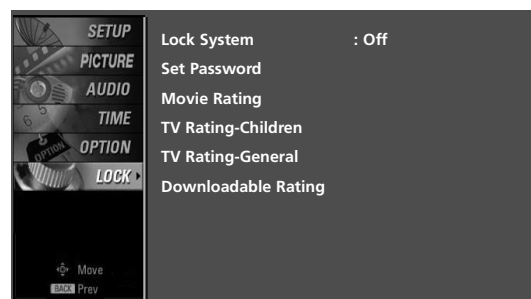

TV Rating Children

Prevents children from watching certain children's TV programs, according to the ratings limit set. The children rating does not apply to other TV programs. Unless you block certain TV programs intended for mature audiences in the TV Rating - sub menu, your children can view those programs.


1 After inputting the password, use the ▲ or ▼ button to choose **TV Rating-Children**.

2 Press the ► button and then use the ▲ or ▼ button to select **Age**, or **Fantasy Violence**.


Press the ► button and then use the ▲ or ▼ button to select block options.

- Age(applies to TV-Y, TV-Y7)
- Fantasy Violence(applies to TV-Y7)

3 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

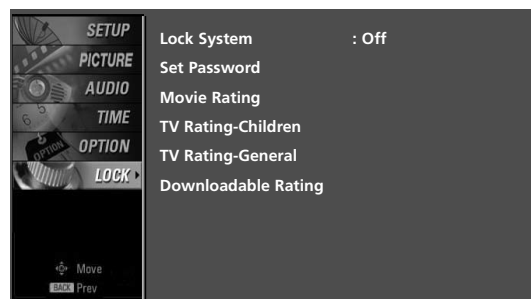

1

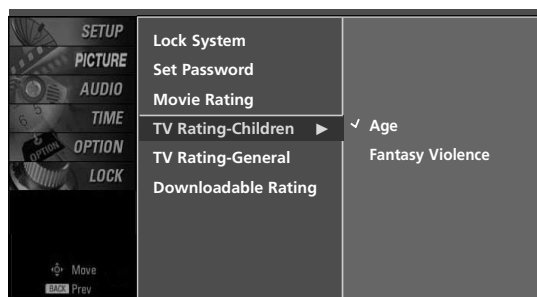

2

TV Rating General

Based on the ratings, blocks certain TV programs that you and your family do not want to view.


1 After inputting the password, use the ▲ or ▼ button to choose **TV Rating-General**.

2 Press the ► button and then use the ▲ or ▼ button to select **Age**, **Dialogue**, **Language**, **Sex** or **Violence**.


Press the ► button and then use the ▲ or ▼ button to select block options.

- Age(applies to TV-G,TV-PG,TV-14,TV-MA)
- Dialogue-sexual dialogue (applies to TV-PG,TV-14)
- Language-adult language (applies to TV-PG,TV-14,TV-MA)
- Sex-sexual situations (applies to TV-PG,TV-14,TV-MA)
- Violence (applies to TV-PG,TV-14,TV-MA)

3 Press the **EXIT** button to return to TV viewing or press the **BACK** button to return to the previous menu.

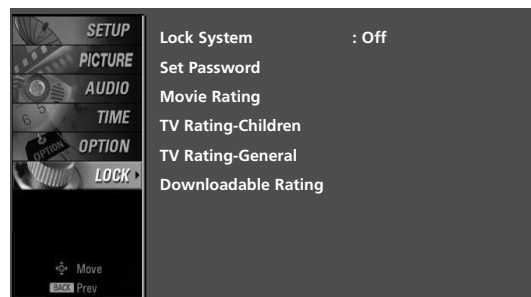

1

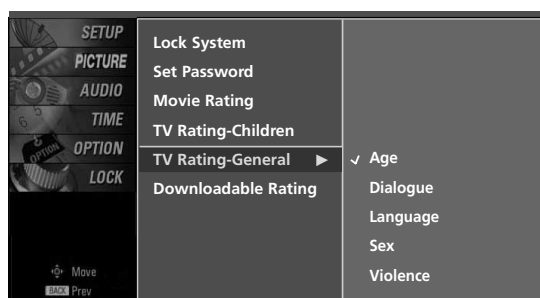

2



PARENTAL CONTROL /RATINGS

DOWNLOADABLE RATING

- 1 After inputting the password, use the ▲ or ▼ button to choose **Downloadable Rating**.
- 2 Press the ► button and then use the ▲ or ▼ button to select **Dim0**, **Dim1**, **Dim2**, or **Dim3**.
- 3 Press the ► button and then use the ▲ or ▼ button to select **D1L1**, **D1L2**, or **D1L3**.
- 4 Press **EXIT** button to return to TV viewing or press **BACK** button to return to the previous menu.

! NOTE

- ▶ This function may become available in the future and will be available only for digital channel signal.
- ▶ This function operates only when TV has received Region5 Rating data.

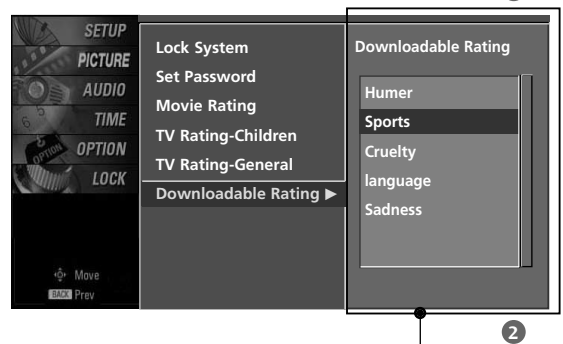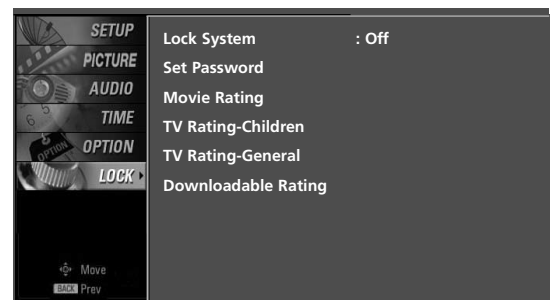

- ▶ Based on rating table, your TV's OSD (On Screen Display) may differ slightly from what is shown in this manual.

APPENDIX

TROUBLESHOOTING

| The operation does not work normally. | |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The remote control doesn't work | <ul style="list-style-type: none"> ■ Check to see if there is any object between the product and the remote control causing obstruction. Ensure you are pointing the remote control directly at the TV. ■ Ensure that the batteries are installed with correct polarity (+ to +, - to -). ■ Ensure that the correct remote operating mode is set: TV, VCR etc. ■ Install new batteries. |
| Power is suddenly turned off | <ul style="list-style-type: none"> ■ Is the sleep timer set? ■ Check the power control settings. Power interrupted. ■ No broadcast on station tuned with Auto off activated. |

| The video function does not work. | |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No picture & No sound | <ul style="list-style-type: none"> ■ Check whether the product is turned on. ■ Try another channel. The problem may be with the broadcast. ■ Is the power cord inserted into wall power outlet? ■ Check your antenna direction and/or location. ■ Test the wall power outlet, plug another product's power cord into the outlet where the product's power cord was plugged in. |
| Picture appears slowly after switching on | <ul style="list-style-type: none"> ■ This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes. |
| No or poor color or poor picture | <ul style="list-style-type: none"> ■ Adjust Color in menu option. ■ Keep a sufficient distance between the product and the VCR. ■ Try another channel. The problem may be with the broadcast. ■ Are the video cables installed properly? ■ Activate any function to restore the brightness of the picture. |
| Horizontal/vertical bars or picture shaking | <ul style="list-style-type: none"> ■ Check for local interference such as an electrical appliance or power tool. |
| Poor reception on some channels | <ul style="list-style-type: none"> ■ Station or cable product experiencing problems, tune to another station. ■ Station signal is weak, reorient antenna to receive weaker station. ■ Check for sources of possible interference. |
| Lines or streaks in pictures | <ul style="list-style-type: none"> ■ Check antenna (Change the direction of the antenna). |

The audio function does not work.

| | |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Picture OK & No sound | <ul style="list-style-type: none"> ■ Press the VOL or VOLUME button. ■ Sound muted? Press MUTE button. ■ Try another channel. The problem may be with the broadcast. ■ Are the audio cables installed properly? |
| No output from one of the speakers | <ul style="list-style-type: none"> ■ Adjust Balance in menu option. |
| Unusual sound from inside the product | <ul style="list-style-type: none"> ■ A change in ambient humidity or temperature may result in an unusual noise when the product is turned on or off and does not indicate a fault with the product. |

There is a problem in PC mode. (Only PC mode applied)

| | |
|------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| The signal is out of range | <ul style="list-style-type: none"> ■ Adjust resolution, horizontal frequency, or vertical frequency. ■ Check the input source. |
| Vertical bar or stripe on background & Horizontal Noise & Incorrect position | <ul style="list-style-type: none"> ■ Work the Auto configure or adjust clock, phase, or H/V position. (Option) |
| Screen color is unstable or single color | <ul style="list-style-type: none"> ■ Check the signal cable. ■ Reinstall the PC video card. |

MAINTENANCE

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you can enjoy your new TV.

Caution: Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the Screen

- 1 Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
- 2 Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the Cabinet

- To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth.
- Please be sure not to use a wet cloth.

Extended Absence

CAUTION

- ▶ If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

PRODUCT SPECIFICATIONS

| MODEL | | 32PC5DVC (32PC5DVC-UG) |
|------------------------------------------------------------------------------------------|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Dimensions (Width x Height x Depth) | including stand | 32.3 x 23.8 x 10.1 inches 819.9 x 603.8 x 255.4 mm |
| | excluding stand | 32.3 x 21.8 x 3.1 inches 819.9 x 554.2 x 78.1 mm |
| Weight | including stand | 36.8 pounds / 16.7 kg |
| | excluding stand | 34.8 pounds / 15.8 kg |
| Power requirement Television System Program Coverage External Antenna Impedance | | AC100-240V ~ 50/60Hz NTSC-M, ATSC, 64 & 256 QAM VHF 2-13, UHF 14-69, CATV 1-135, DTV 2-69, CADTV 1-135 75 ohm |
| Environment condition | Operating Temperature Operating Humidity | 32 ~ 104°F (0 ~ 40°C) Less than 80% |
| | Storage Temperature Storage Humidity | -4 ~ 140°F (-20 ~ 60°C) Less than 85% |


■ The specifications shown above may be changed without prior notice for quality improvement.

EXTERNAL CONTROL THROUGH RS-232C

The RS-232C port allows you connect the RS-232C input jack to an external control device (such as a computer or an A/V control system) to control the TV's functions externally.


- Note: RS-232C on this unit is intended to be used with third party RS-232 control hardware and software. The instructions below are provided to help with programming software or to test functionality using telenet software.

RS-232C Setup

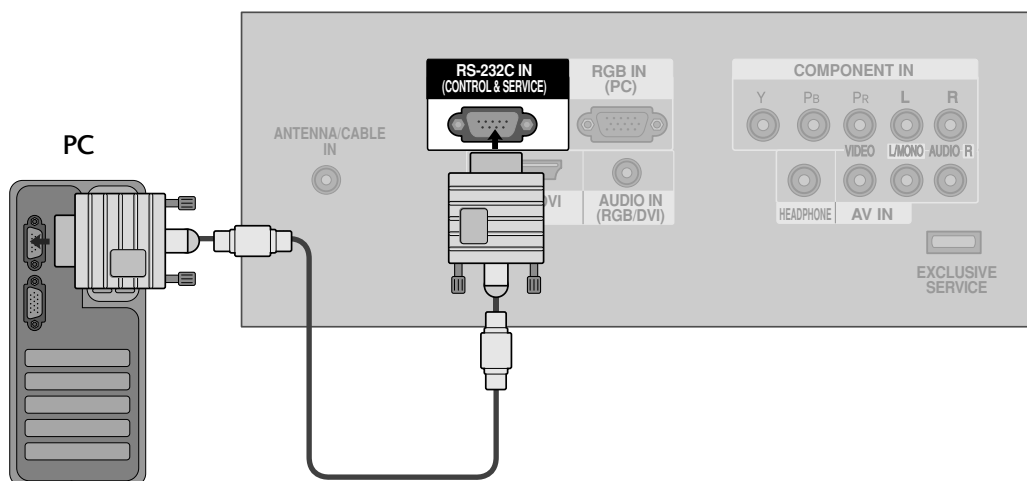



Type of Connector; D-Sub 9-Pin Male

| No. | Pin Name |
|-----|----------------------|
| 1 | No connection |
| 2 | RXD (Receive data) |
| 3 | TXD (Transmit data) |
| 4 | DTR (DTE side ready) |
| 5 | GND |
| 6 | DSR (DCE side ready) |
| 7 | RTS (Ready to send) |
| 8 | CTS (Clear to send) |
| 9 | No Connection |

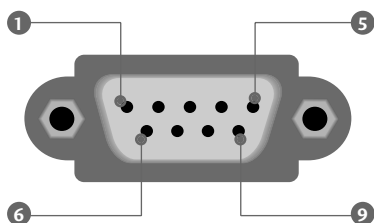

RS-232C Configurations

Either cable below can be used.

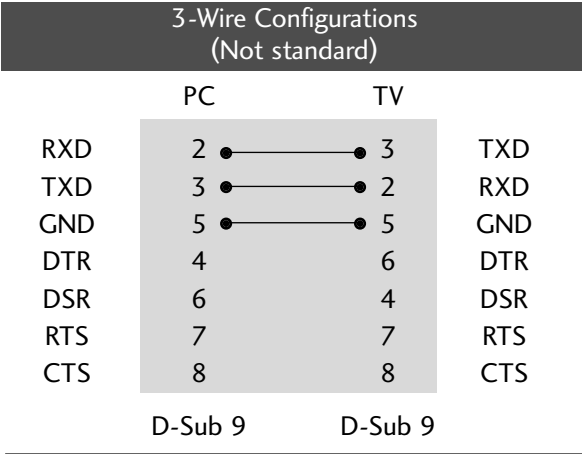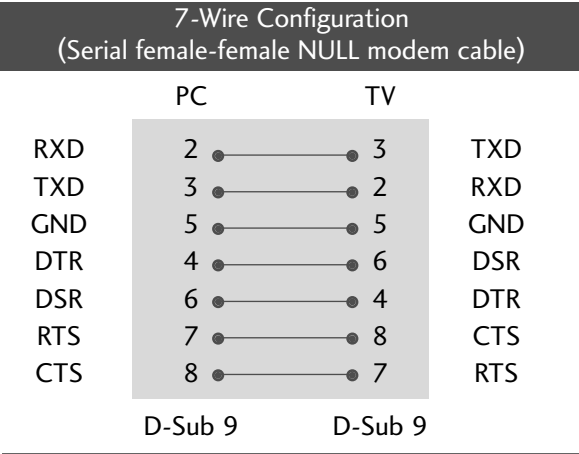

Communication Parameters

- Baud rate: 9600 bps (UART)

■ Data length: 8 bits

■ Parity: None
- Stop bit: 1 bit

■ Communication code: ASCII code

■ Use a crossed (reverse) cable.

! NOTE

► This product has command echo back in the RS-232C Command.

Command Reference List

| | COMMAND1 | COMMAND2 | DATA (Hexadecimal) | | COMMAND1 | COMMAND2 | DATA (Hexadecimal) |
|---------------------------------|----------|----------|-----------------------|------------------------|----------|----------|-----------------------|
| 01. Power | k | a | 00 ~ 01 | 15. Treble | k | r | 00 ~ 64 |
| 02. Input Select | k | b | (▶ p.70) | 16. Bass | k | s | 00 ~ 64 |
| 03. Input Select | x | b | (▶ p.70) | 17. Balance | k | t | 00 ~ 64 |
| 04. Aspect Ratio | k | c | (▶ p.70) | 18. Color Temperature | k | u | 00 ~ 03 |
| 05. Screen Mute | k | d | 00 ~ 01 | 19. Red Adjustment | k | v | 00 ~ 28 |
| 06. Volume Mute | k | e | 00 ~ 01 | 20. Green Adjustment | k | w | 00 ~ 28 |
| 07. Volume Control | k | f | 00 ~ 64 | 21. Blue Adjustment | k | \$ | 00 ~ 28 |
| 08. Contrast | k | g | 00 ~ 64 | 22. ISM Method | j | p | 00 ~ 03 |
| 09. Brightness | k | h | 00 ~ 64 | 23. Low Power | j | q | 00 ~ 01 |
| 10. Color | k | i | 00 ~ 64 | 24. Auto Configuration | j | u | (▶ p.72) |
| 11. Tint | k | j | 00 ~ 64 | 25. Channel Add/Del | m | b | 00 ~ 01 |
| 12. Sharpness | k | k | 00 ~ 64 | 26. Key | m | c | (▶ p.72) |
| 13. OSD Select | k | l | 00 ~ 01 | | | | |
| 14. Remote Control Lock Mode | k | m | 00 ~ 1 | | | | |

| | COMMAND1 | COMMAND2 | DATA0 (Hexadecimal) | DATA1 (Hexadecimal) | DATA2 (Hexadecimal) | DATA3 (Hexadecimal) | DATA4 (Hexadecimal) | DATA5 (Hexadecimal) |
|--------------------|----------|----------|--------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|
| 27. Channel Tuning | m | a | physical program high | major program low | major low | minor high | minor low | attribute |

Transmission / Receiving Protocol

Transmission

[Command1][Command2][][Set ID][][Data][Cr]

[Command 1]: First command to control the set.(j, k, m or x)

[Command 2]: Second command to control the set.

[Set ID] : You can adjust the set ID to choose desired TV ID number in Setup menu. Adjustment range is 1 ~ 99. When selecting Set ID '0', every connected the TV is controlled. Set ID is indicated as decimal (1 ~ 99) on menu and as Hexa decimal (0x0 ~ 0x63) on transmission /receiving protocol.

[DATA]: To transmit the command data.

Transmit the 'FF' data to read status of command.

[Cr]: Carriage Return

ASCII code '0x0D'

[]: ASCII code 'space (0x20)'

* In this model, TV will not send the status during the standby mode.

OK Acknowledgement

[Command2][][Set ID][][OK][Data][x]

The TV transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

* In this model, TV will not send the status during the standby mode.

* Data Format

[Command 2]: Use as command.

[Set ID]: Use the small character, if set ID is 10, it will send the '0', 'a'.

[DATA]: Use the small character, if data is 0 x ab, it will send the 'a', 'b'.

[OK]: Use the large character.

Error Acknowledgement

[Command2][][Set ID][][NG][Data][x]

The TV transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

Data1: Illegal Code

Data2: Not supported function

Data3: Wait more time

* In this model, TV will not send the status during the standby mode.

* Data Format

[Command 2]: Use as command.

[Set ID]: Use the small character, if set ID is 10, it will send the '0', 'a'.

[DATA]: Use the small character, if data is 0 x ab, it will send the 'a', 'b'.

[NG]: Use the large character

01. Power (Command: k a)

To control Power On/Off of the TV.

Transmission [k][a][][Set ID][][Data][Cr]

Data 00: Power Off Data 01: Power On

Acknowledgement [a][][Set ID][][OK/NG][Data][x]

* In a like manner, if other functions transmit 'FF' data based on this format, Acknowledgement data feedback presents status about each function.

* Note: In this model, TV will send the Acknowledge after power on processing completion.

* There might be a time delay between command and acknowledge.

02. Input Select (Command: k b)

To select input source for the TV.

Transmission [k][b][][Set ID][][Data][Cr]

Data 00: DTV Data 04: Component

Data 01: Analog TV Data 07: RGB-PC

Data 02: AV Data 08: HDMI

Acknowledgement [b][][Set ID][][OK/NG][Data][x]

* If you select input source, we recommend "command x b".

03. Input Select (Command: x b)

To select input source for TV.

Transmission [x][b][][Set ID][][Data][Cr]

Data 00: DTV (Antenna) Data 01: DTV (Cable)

Data 10: Analog (Antenna) Data 11: Analog (Cable)

Data 20: AV Data 40: Component

Data 60: RGB-PC Data 90: HDMI

Acknowledgement [b][][Set ID][][OK/NG][Data][x]

04. Aspect Ratio (Command: k c)

To adjust the screen format.

Transmission [k][c][][Set ID][][Data][Cr]

Data 01: 4:3 04: Zoom

02: 16:9 06: Set by program

⋮

Reserved

Acknowledgement [c][][Set ID][][OK/NG][Data][x]

05. Screen Mute (Command: k d)

To select screen mute on/off.

Transmission [k][d][][Set ID][][Data][Cr]

Data 00: Screen mute off (Picture on)

Data 01: Screen mute on (Picture off)

Acknowledgement [d][][Set ID][][OK/NG][Data][x]

06. Volume Mute (Command: k e)

To control volume mute on/off.

You can also adjust mute using the MUTE button on remote control.

Transmission [k][e][][Set ID][][Data][Cr]

Data 00: Volume mute on (Volume off)

Data 01: Volume mute off (Volume on)

Acknowledgement [e][][Set ID][][OK/NG][Data][x]

07. Volume Control (Command: k f)

To adjust volume.

You can also adjust volume with the volume buttons on remote control.

Transmission [k][f][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping 1'. ► p.71.

Acknowledgement [f][][Set ID][][OK/NG][Data][x]

08. Contrast (Command: k g)

To adjust screen contrast.

You can also adjust contrast in the Picture menu.

Transmission [k][g][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping 1'. ► p.71.

Acknowledgement [g][][Set ID][][OK/NG][Data][x]

09. Brightness (Command: k h)

To adjust screen brightness.

You can also adjust brightness in the Picture menu.

Transmission [k][h][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping 1'. ► p.71.

Acknowledgement [h][][Set ID][][OK/NG][Data][x]

10. Color (Command: k i)

To adjust screen color.

You can also adjust color in the Picture menu.

Transmission [k][i][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping 1'. ► p.71.

Acknowledgement [i][][Set ID][][OK/NG][Data][x]

11. Tint (Command: k j)

To adjust screen tint.

You can also adjust tint in the Picture menu.

Transmission [k][j][][Set ID][][Data][Cr]

Data Red: 00 ~ Green: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping 1'. ► p.71.

Acknowledgement [j][][Set ID][][OK/NG][Data][x]

12. Sharpness (Command: k k)

To adjust screen sharpness.

You can also adjust sharpness in the Picture menu.

Transmission [k][k][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping 1'. ► p.71.

Acknowledgement [k][][Set ID][][OK/NG][Data][x]

13. OSD Select (Command: k l)

To select OSD (On Screen Display) on/off.

Transmission [k][l][][Set ID][][Data][Cr]

Data 00: OSD off Data 01: OSD on

Acknowledgement [l][][Set ID][][OK/NG][Data][x]

14. Remote Control Lock Mode (Command: k m)

To lock the remote control and the front panel controls on the set.

Transmission [k][m][][Set ID][][Data][Cr]

Data 00: Lock off Data 01: Lock on

Acknowledgement [m][][Set ID][][OK/NG][Data][x]

If you're not using the remote control and front panel controls on the TV, use this mode. When main power is on/off, remote control lock is released.

15. Treble (Command: k r)

To adjust treble.

You can also adjust treble in the Audio menu.

Transmission [k][r][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping 1' as shown below.

Acknowledgement [r][][Set ID][][OK/NG][Data][x]

16. Bass (Command: k s)

To adjust bass.

You can also adjust bass in the Audio menu.

Transmission [k][s][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping 1' as shown below.

Acknowledgement [s][][Set ID][][OK/NG][Data][x]

17. Balance (Command: k t)

To adjust balance.

You can also adjust balance in the Audio menu.

Transmission [k][t][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping 1' as shown.

Acknowledgement [t][][Set ID][][OK/NG][Data][x]

18. Color Temperature (Command: k u)

To adjust color temperature.

You can also adjust color temperature in the Picture menu.

Transmission [k][u][][Set ID][][Data][Cr]

Data 00: Medium 01: Cool 02: Warm 03: User

Acknowledgement [u][][Set ID][][OK/NG][Data][x]

19. Red Adjustment (Command: k v)

To adjust red in color temperature

Transmission [k][v][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 28

*Refer to 'Real data mapping 2' as shown below.

Acknowledgement [v][][Set ID][][OK/NG][Data][x]

20. Green Adjustment (Command: k w)

To adjust green in color temperature.

Transmission [k][w][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 28

*Refer to 'Real data mapping 2' as shown below.

Acknowledgement [w][][Set ID][][OK/NG][Data][x]

21. Blue Adjustment (Command: k \$)

To adjust blue in color temperature.

Transmission [k][\$][][Set ID][][Data][Cr]

Data Min: 0 ~ Max: 28

*Refer to 'Real data mapping 2' as shown below.

Acknowledgement [\$][][Set ID][][OK/NG][Data][x]

22. ISM Method (Command: j p)

To avoid having a fixed image remain on screen.

Transmission [j][p][][Set ID][][Data][Cr]

Data 01: Inversion

04: White Wash

02: Orbiter

08: Normal

Acknowledgement [p][][Set ID][][OK/NG][Data][x]

23. Low Power (Command: j q)

To control the low power function on/off.

Transmission [j][q][][Set ID][][Data][Cr]

Data 00: Low Power off

01: Low Power on

Acknowledgement [q][][Set ID][][OK/NG][Data][x]

*Real data mapping 1

0: Step 0

⋮

A: Step 10 (SET ID 10)

⋮

F: Step 15 (SET ID 15)

10: Step 16 (SET ID 16)

⋮

63: Step 99 (SET ID 99)

64: Step 100

*Real data mapping 2

0: -20

1: -19

3: -18

⋮

13: -1

14: 0

15: +1

⋮

27: +19

28: +20

24. Auto Configuration (Command: j u)

To adjust picture position and minimize image shaking automatically. Auto configuration only works in RGB-PC mode.

Transmission [j][u][][Set ID][][Data][Cr]

Data 01: To set

Acknowledgement [u][][Set ID][][OK/NG][Data][x]

25. Channel Add/Del (Command: m b)

To add and delete the channels.

Transmission [m][b][][Set ID][][Data][Cr]

Data 00: Channel Delete Data 01: Channel Add

Acknowledgement [b][][Set ID][][OK/NG][Data][x]

26. Key (Command: m c)

To send IR remote key code.

Transmission [m][c][][Set ID][][Data][Cr]

Acknowledgement [c][][Set ID][][OK/NG][Data][x]

| Code (Hexa) | Remote control | Code (Hexa) | Remote control |
|-------------|----------------|-------------|----------------|
| 0F | TV | 39 | CC |
| 0B | INPUT | 40 | ▲ |
| 08 | POWER | 41 | ▼ |
| 0E | TIMER | 07 | ◀ |
| 10-19 | Number Key 0-9 | 06 | ▶ |
| 4C | - (Dash) | 44 | ENTER |
| CB | ADJUST | 43 | MENU |
| 09 | MUTE | 52 | SOUND |
| 02 | VOL + | 4D | PICTURE |
| 03 | VOL - | 5B | EXIT |
| 00 | CH + | 0A | SAP |
| 01 | CH - | 1A | BACK |
| 1E | FAV | | |

27. Channel Tuning (Command: m a)

To tune channel to following physical/major/minor number.

Transmission [m][a][][Set ID][][Data00][][Data01][][Data02][][Data03][][Data04][][Data05][Cr]

Digital channels have a Physical, Major, and Minor channel number. The Physical number is the actual digital channel number, the Major is the number that the channel should

be mapped to, and the Minor is the sub-channel. Since the ATSC tuner automatically maps the channel to the Major number, the Physical number is not required when sending a command.

Data 00: Physical Channel Number

NTSC air: 02~45, NTSC cable: 01, 0E~7D

ATSC air: 01~45, ATSC cable: 01~87

Data 01 & 02: Major Channel Number

Data 01: High byte Data 02: Low byte

Two bytes are available for the Major and Minor, normally only the second byte is used.

Data 03 & 04: Minor Channel Number

Not needed for NTSC.

Data5:

| 7 | Main/Sub Picture | 6 | Two/One Part Channel | 5 | Using Physical Channel | 4 | Reserved | 3 | 2 | 1 | 0 | Step |
|---|------------------|---|----------------------|---|------------------------|---|----------|---|---|---|---|-----------------|
| 0 | Main | 0 | Two | 0 | Use | x | | 0 | 0 | 0 | 0 | NTSC Air |
| 1 | Sub | 1 | One | 1 | No Use | x | | 0 | 0 | 0 | 1 | NTSC Cable |
| | | | | | | x | | 0 | 0 | 1 | 0 | ATSC Air |
| | | | | | | x | | 0 | 0 | 1 | 1 | ATSC Cable_std |
| | | | | | | x | | 0 | 1 | 0 | 0 | ATSC Cable_hrc |
| | | | | | | x | | 0 | 1 | 0 | 1 | ATSC Cable_irc |
| | | | | | | x | | 0 | 1 | 1 | 0 | ATSC cable_auto |
| | | | | | | x | | 0 | 1 | 1 | 1 | Reserved |
| | | | | | | x | | x | x | x | x | ... |
| | | | | | | x | | 1 | 1 | 1 | 1 | Reserved |

The table above lists the binary code which must be converted to Hexadecimal before sending. For example:
The binary code to tune the sub source to an NTSC cable channel is "1000 0001", which translates to "81" in Hex.

- * 7th bit: For which source do you want to change the channel.
- * 6th bit: Use a two part or one part channel. Most cases just use 0 since it's ignored when using NTSC.
- * 5th bit: Use 0 with NTSC since it can only use the physical channel number. Normally use 1 for ATSC since most times it doesn't matter what the physical number is.
- * 4th bit: Set to 0.
- * 3-0 bits: Choose signal type.

* Tune Command Examples:

1. Tune to the analog (NTSC) cable channel 35.

Data 00 = Physical of 35 = 23
Data 01 & 02 = No Major = 00 00
Data 03 & 04 = No Minor = 00 00
Data 05 = 0000 0001 in binary = 01
Total = ma 00 23 00 00 00 00 01

2. Tune to the digital (ATSC) local channel 30-3.

Data 00 = Don't know Physical = 00
Data 01 & 02 = Major is 30 = 00 1E
Data 03 & 04 = Minor is 3 = 00 03
Data 05 = 0010 0010 in binary = 22
Total = ma 00 00 00 1E 00 03 22

```
Acknowledgement[a][ ][Set ID][ ][OK][Data00][Data01]
[Data02][Data03][Data04][x][a][ ][Set ID]
[ ][NG][Data00][x]
```

LG Electronics Inc.